

Since 1968

COMMAX
SmartHome & Security

User Manual

Color video door phone CDV-70MF



www.commax.com

COMMAX Co.,Ltd.



- Thank you for purchasing COMMAX products.
- Please carefully read this User's Guide (in particular, precautions for safety) before using a product and follow instructions to use a product exactly.
- The company is not responsible for any safety accidents caused by abnormal operation of the product.



Table of contents

1. Greetings	1
2. Warnings and cautions	2
3. Part names	4
4. How to use the product	5
5. How to install	19
6. Wiring diagram	20
7. Package contents	21
8. Specifications	22
9. Safe operation guide	22









 


1. Greetings




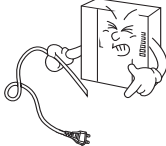



 





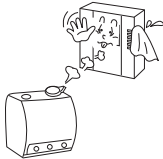



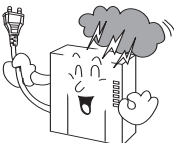









- Thank you for Purchasing COMMAX Products
- Please carefully read this User,s Manual (In particular, pre cautions for safety) before using a product and follow instructionsto use a product exactly.

2. Warnings and caution

Please follow the things described below in order to prevent any danger or property damage.

 Warning It may cause a serious damage or injury if violated.  Caution It may cause a minor damage or injury if violated.	 Prohibition.  No disassembly  No touch  Must follow strictly.  Shows plugging out the power cord without an exception  Shows the warning and caution for an electric shock.  Shows the warning and caution for a fire.
--	--

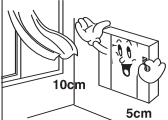Warning

Power & Installation	<p>Please don't use several products at the same time on one power socket.</p> <ul style="list-style-type: none"> It may cause a fire due to an abnormal overheating.    <p>Prohibition Fire</p>	<p>Please don't bend the power cable excessively or it may cause an electric shock.</p> <ul style="list-style-type: none"> fire when using a damaged power cable.     <p>Prohibition Electric shock Fire</p>	<p>Please don't handle the power cable with a wet hand.</p> <ul style="list-style-type: none"> It may cause an electric shock.    <p>Prohibition Fire</p>	<p>Please plug out the power cable from the socket when not using it for a long period of time.</p> <ul style="list-style-type: none"> It may shorten the product lifespan or cause a fire.    <p>Request Fire</p>
	<p>Please don't install the product in the place where there is much oil, smoke or humidity.</p> <ul style="list-style-type: none"> It may cause an electric shock or fire.     <p>Prohibition Electric shock Fire</p>	<p>Please don't install the product with the lightning and thunder.</p> <ul style="list-style-type: none"> It may cause an electric shock or fire.     <p>Prohibition Electric shock Fire</p>	<p>Please don't use and connect this product with other products with different rated voltage</p> <ul style="list-style-type: none"> It may cause a disorder or fire.    <p>Prohibition Fire</p>	<p>When installing the product that generates heat, please install the product away from the wall (10cm) for the ventilation.</p> <ul style="list-style-type: none"> It may cause a fire due to the increased internal temperature.    <p>Prohibition Fire</p>

⚠ Warning

Cleaning & Use

Please don't disassemble, repair or rebuild this product arbitrarily (please contact the service center if a repair is needed).

- It may cause an electric shock or fire.



If an abnormal sound, burning smell or smoke is coming out of the product, please plug out the power cable and contact a service center.

- It may cause an electric shock or fire.



Please don't insert any metallic or burnable materials into the ventilation hole.

- It may cause an electric shock or fire.



Please use only the designated batteries for the products of using DC power.

- It may cause an electric shock or fire.




⚠ Caution

Power & Installation

Please plug the power cable firmly into the inner end

- It may cause a fire.

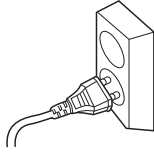

Please hold the plug tightly when unplugging the power cable (a part of the copper wire may be disconnected if the grabbing is only made on the cord when pulling out the cable).

- It may cause an electric shock or fire



 
When connecting the power cables after cutting the cable, please install the product with power off

- It may cause an electric shock or fire




When installing the product, please fix it firmly while using the wall-mounting unit and screws.

- It may cause an injury from the falling object.



 Please be careful when using an AC circuit breaker since there is a possibility of an electric shock.




Please check the use voltage and current for the DC-only products and use the appropriate rectifier.

- It may cause a fire.



Please avoid direct rays of the sun or heating devices at a time of installation.

- It may cause a fire.

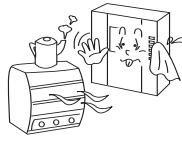

Please don't install the product on an unstable place or small support board.

- It may cause an injury if it falls down while in use.




Cleaning & Use

When cleaning the product, please rub it with a soft and dry cloth after plugging out the power cable. (Please don't use any chemical products such as wax, benzene, alcohol or cleanser.)



Please don't drop the product on the ground and don't apply a shock.

- It may cause a failure.

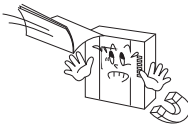


Please use the designated connection cable within the maximum calling distance designated for the product

- It may reduce the product performance.





3. Parts names

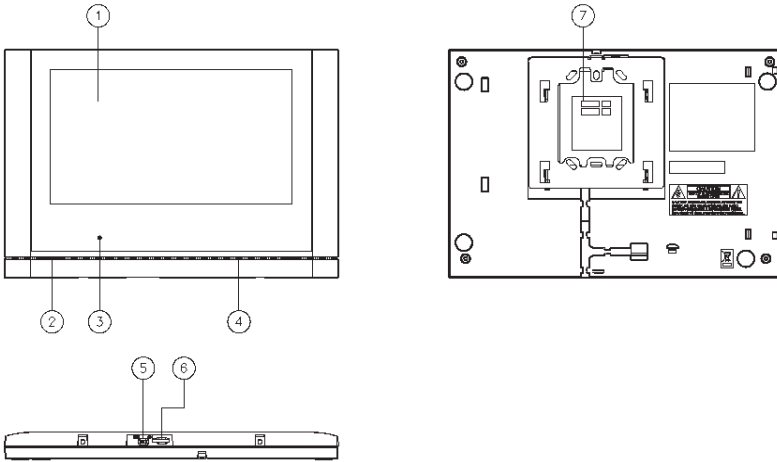

No	Parts	No.	Parts	No.	Parts
1	Touch LCD	2	Speaker	3	Power LED
4	Microphone	5	Power switch	6	Micro SD card slot
7	Connection terminal				

4. How to use the product

4-1 Main screen



No.	Menu	Details
1	Monitor	View the door camera - You cannot use it if door camera is not connected
2	CCTV	Monitoring CCTV - You cannot use it if CCTV is not connected
3	Interphone	Move to Interphone menu
4	Playback	Move to the list of recorded images and videos
5	Security	Move to Security menu.
6	Option	Move to the menu 'Options'
6	Mute Icon	Indication of mute status
7	Date & Time	Indication of Date and Time, Touch to move to the menu 'Set-up'

Cautions

- Please set up date and time before use.
. If you do not set up, some problems in saving still-cut image and video-clip might happen.

4-2 Monitor

- The following screen will be shown when calling from door camera or touching the button 'Monitor'
(CCTV1 with Door1, CCTV2 with Door2 are displayed as PIP)
(When CCTV is connected)
- Max. time : Monitoring (30 sec.), Call and Talk (60 sec.)
- If the camera is not installed, it cannot be executed.



- Selected camera: Selected camera will be shown on the screen.
- Date & Time: Current date and time will be indicated.
- Storage (Saving) icons: Icons for motion detection and recording will be indicated.

- Details of icons



Storage format: Images / Videos (In Motion detection mode)

Storage mode: MANUAL / AUTO

SD card status: Insertion / Full memory

- Split screen view: Split monitoring of door cameras is available.

It's not available to use if there is only one camera installed.

- Image quality adjustment: Display setting for door camera (Door camera #1, #2).
 - Brightness/ Luminosity / Chroma adjustment is available after pushing the button.
 - The range for adjustment is 0-20. There is a button located on the right upper for initialization.



- Volume control: You can control calling tone volume and receiving tone volume.
 - Push the button in order to adjust the volume.
 - Volume adjustment level: Ring (0-3), Speaker (1-3)



- ⑦ Call connection: To call & answer the call.
- After call is connected, 7 & 8 buttons will be changed as follows.



Door open (No.7): To open the door.



End call (No.8): To end a call.

- When you set opening mode from 1 door to 2 doors, the door open icon will be shown as below. (It will be applied to door1 only, and connected camera should support 2 door opening)



Touch this icon to open the door connected with door1.

*** Cautions**

If you set 'Fast mode' in the menu option 'Open door mode', there will be shown the 'Door open' icon. In this case, it is possible to open the door without connecting the door..

- ⑧ Call cancellation: To cancel the call when you get a call from door or lobby.
⑨ Video-clip storage (saving): To store (save) a video-clip.
- When you touch a button, you can store a video-clip.
(When you set an auto-storage mode, a video-clip is automatically stored)
- Max 120 seconds per one storage (Call connection 60 seconds + Calling 60 seconds)
- The below icon will be shown during storage, and the remaining time will be shown on the right upper.



- If you want to stop storage, you should touch the icon.

- ⑩ Image (Still-cut image) storage: To store (save) a still-cut image.
- When you touch a button, you can store images. And the below icon will be shown during storage.



*** Calling of visitor**

- ① When a visitor calls from entrance, you can hear calling tone(sound) and the visitor's image appears on the monitor.
- Max 60 seconds for call connection time.
- When you set an auto-storage mode, video-clip and image are automatically Stored.
② When you touch a call connection button, you can talk to a visitor. And when you touch a door-open button, the door will be opened.
- Max 60 seconds for calling time.
- While a video-clip is being stored, you can re-store a video-clip for 60 seconds from call-connecting moment.
- You can open the door when the screen is on. And, it is possible only when door camera is interlocked with door release function.



- When you touch a door-open button, the below door-open icon will be shown in the center of screen. But door-open sound will not work during video-clip and image storage.

- ③ When the other call comes from the other entrance, the current call is finished and the other call

is connected.

- ④ When you press a call-end button, the call is end. And the main screen will be shown.

* Calling of Interphone


- ① In case of installing additional interphone, when a visitor calls from door camera, a calling tone(sound) will be ringed in the interphone as well.
 - Max 60 seconds for call and talk time
- ② When you pick up the handset, it's available to talk with door camera.
- ③ During a call, press the door open button to open the door.
(In case door camera is interlocked with door release function)
- ④ Put the handset back on and the call ends.
 - The interphone call ends when the connected video phone call finished.

* PIP(Picture in Picture) function

If you touch the screen after a call comes from the individual door camera, CCTV screen is shown as PIP in the upper left corner.(Same as Monitoring)
At this time, if you touch one of the screens, individual entrance and CCTV screen are switched to each other.

4-3 CCTV

- When you touch a CCTV button, the below screen will be shown.
- Monitoring time is max. 60 seconds. The video-clip storage can be proceeded within 60 seconds.
- You cannot use CCTV functions if cameras are not installed.

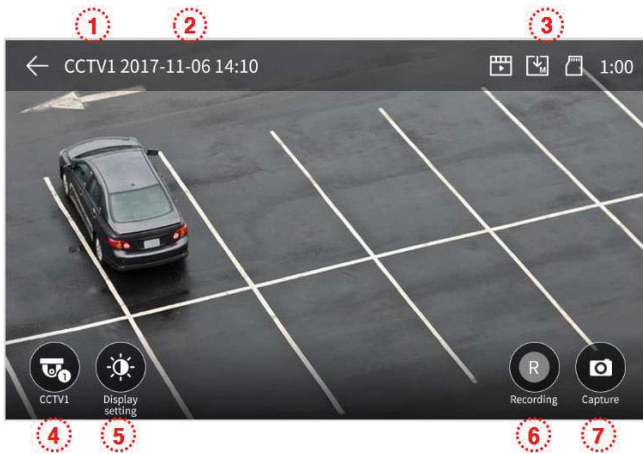

- ◆ CCTV sign: To show the current working CCTV.
- Date & Time: Current date and time will be indicated.
- Icon set: To show motion detection and video storage. (Monitor section for more details)
- △ CCTV screen change: To see CCTV 1 screen and CCTV 2 screen.
 - You cannot use this function when only one camera is connected.
- ▲ Video quality adjustment: To change Brightness/Light & Shade/Chroma. (Monitor section for more details)
- ⑥ Video storage: To store (save) a video-clip.
 - When you touch a button, the storage will be started.
 - The below icon will be shown during image storage. And the remaining time will be shown on the right upper.



- If you want to stop storage, you should touch the icon.

⑦ Image storage: To store (save) a still-cut image.

- When you touch a button, you can store images. And the below icon will be shown during storage.



*** Reference (Door camera and CCTV are same in the below issues.)**

① Video-clip cannot be stored while SD card is not inserted.

- In this case, images can be stored in the monitor's embedded memory.
(Max 50 still-cut images).

- You can use as below when you need back-up of images which are stored in the monitor's embedded memory.

1) Turn off the monitor and then insert SD card. Turn on the monitor. And then the images are automatically stored in SD card.

2) You can check the file through your computer. ([**backup folder**] in SD card)

3) You can check the date, storage time and information
(camera source, saving format, emergency storage).

- File name: YYYYMMDD_HHMMSS_AB.AVI or JPG

Note : The meaning of the last two digits (denoted by AB)

A : 1 - DOOR1 / 2 - DOOR2 / 3 - CCTV1 / 4 - CCTV2

B : 1 - MANUAL(manual recording)/2 - AUTO/3 - MOTION/4 - ALARM

XXXX : File numbering


ex : The meaning of the file '20180109_045740_120001.MOV'

-> Video automatically recorded by visitors calling from door1 on January 9, 2018 at 4:57:40

② The image and video-clip can be stored while SD card is inserted. The maximum storage size depends on the capacity (storage size) of SD card.

4-4 Interphone

- When you touch the Interphone button, it calls the connected interphone and the following screen is displayed.

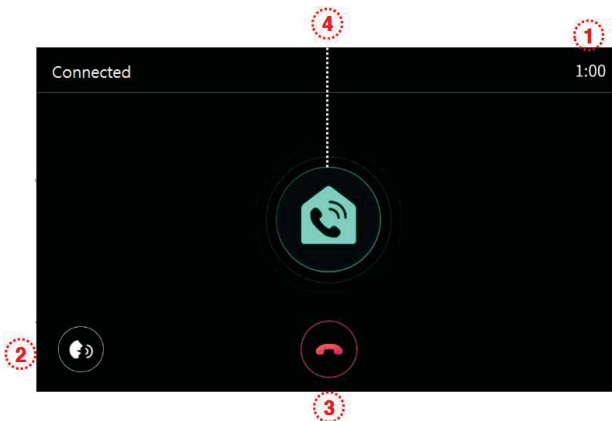




① Call & Talk time : To show remaining call and talk time.

- ② Volume control : To control receiving volume (1-3 level).
- ③ Call end : To finish call connection and talk.
- ④ Interphone call : The interphone is called only while pressing the call button.
(A ringtone sounds only while you are pressing and holding)


4-5 Playback

- When you touch Playback button, the below screen will be shown.
- Select the image. (Selected image will be enlarged and video will be displayed.)



- ① Page information : Current page / Total page
- ② Move the page: ◀ : previous page / ▶ : next page
- ③ File information
 : Image file,  : Video file,  : New file
- ④ Emergency Recording: File saved when emergency occurs by sensors.
 - When 'Auto Rec' is set in Security menu, CCTV video is recorded for 10 secs when emergency occurs.
 (CCTV1 is automatically saved when sensor # 1 is detected and CCTV2 is saved by sensor # 2.
 But, if there is no SD card inserted, only steel cut image is saved and the sensor need to be connect to CCTV.)
 - If visitor call is received during emergency, the video of visitor will be saved automatically on 'Auto Recording' setting or also can be saved manually.
 (During emergency situation, the visitor communication is restricted and only the visitor image can be checked.)


- To verify images.

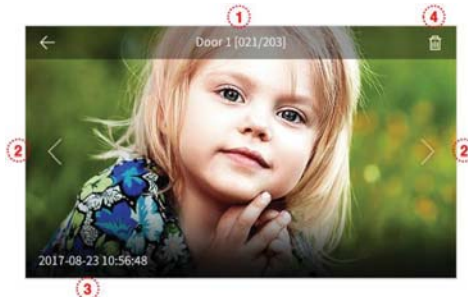

- ① Storage source & file No.
- ② Left/Right movement : To move the previous/next file.

- ③ Date &Time : Current date and time will be indicated.
- ④ Delete files: To delete images.

- To verify video-clip.

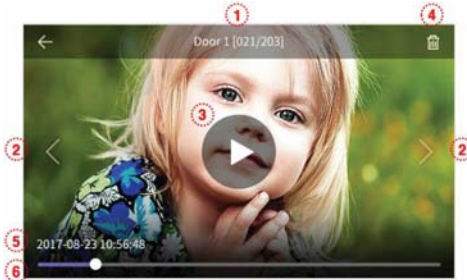

- ① CD Storage source & file No.
- ② CT Left/Right movement: To move the previous/next file.
- ③ Playing the file: To play the current video-clip.
During playback, the icon is changed by the pause button.
- ④ Delete the file: To delete the current playing file.
- ⑤ Date & Time: Current date and time will be indicated.
- ⑥ Video-clip time indication: The remaining time is displayed

<Note>

- Immediately after inserting SD card, the loading time depends on the number of stored file size.
- If you press Playback button before loading completes, pop-up window will appear.
In this case, please wait a moment.

3-6. Security (Can be used with security sensor)

- Touch the Security button to display the following screen.
- Using this function, the door is detected when the sensor is connected.



< Before operation >



< During Operation >

- 1) Before operating Security mode

※ Caution

Be aware of the password before proceeding.
You cannot turn off the alarm if you don't know current password. (Factory default : 1234)

- ① Security Sensor 1, Security Sensor 2: Select sensor to operate.
- ② Select check box : If the sensor is selected by check box. (Turn on & Turn off)
- ③ Execute button: Activate the selected sensor. (Please note that the alarm occurs when sensor is detected)
- ④ Emergency log : You can check emergency log. (Up to 255 log can be stored)
- ⑤ Auto recording: CCTV is automatically recorded for 10 seconds when an emergency occurs.

- When the function is active (red), the corresponding function is activated. (You can turn off it by click.)
- CCTV1 is recorded in case of sensor 1 emergency, and CCTV2 is automatically recorded in case of sensor 2.
(If there is no SD card, it will be replaced with steel cut image. If CCTV is not connected to the sensor, it will not be recorded.)

2) During Security mode : The LED light of unit is flickering on red.

- ⑥ Indicates the security sensor being executed.
- ⑦ End the security function.

- Press the button and enter the four-digit password. (Factory default password: 1234)
- If the password is correct, the mode is turned off and the screen returns to the main screen.
(If the password is incorrect, you can not turn the mode and please progress initialization of the device.)

<Password input screen to turn off the mode>



<Sensor detected screen during security mode>




1) When security alarm occurs

- When a sensor is detected during security mode, an alarm is generated, and the sensor number (Sensor1 or Sensor2) and the time of occurrence are displayed.
- If the emergency situation is canceled, press 'Stop' button at the bottom.
(You can turn off the alarm if the corresponding sensor is recovered to normal status.)
- When the password input window appears, enter the four-digit password using the key buttons.
- Alarm sound occurs for 3 minutes and then only alarm screen is displayed after then.
- If an alarm occurs, it will not be possible to communicate with visitor even if the call is received. Please turn off the alarm first.
(During the alarm occurs, the calling sound rings by the camera to indicate the emergency situation.)

4-6 Option

- When you touch option button, the below screen will be shown.
- When you select each item, the corresponding sub item is displayed on the right.
- If you do not do any action for 30 seconds after you get in Option menu, the main screen will be shown.

① Recording

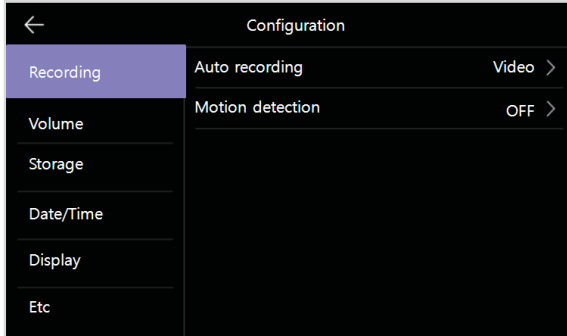

1) Auto recording

- To set the auto save mode. (Select between Photo / Video)
However, if there is no SD card, video mode cannot be selected.
- This function is only available when a call comes from a door camera (entrance). And you cannot save photos and video-clip manually until the automatic saving is started.
- Selecting OFF disables the auto save function.

2) Motion detecting

- To set motion detection of the previously set camera.
- Functions of each menu are as following.



Motion detector: To set enable / disable function.

Select camera: To select camera for monitoring. (Select from Door1/2, CCTV1/2)

Storage format: To select storage method. (Select between Photo / Video)

Sensing sensitivity: To set sensitivity. (Select among High / Middle / Low)

Motion timer: To set up the timer function activation. (Motion detection activation time)


Once activated, you can set the timer, start / end time.

LCD is on for motion detection : During video recording, it shows video on LCD.
(for 10 seconds)

* Reference

- When detecting motion, the photo is saved for 1 scene and the video-clip is saved for 10 seconds.
- The LED is flickering during the saving of the video-clip. And, when you touch the screen, the saving is stopped.
- After saving, the front LED stops blinking, and the motion detection is started within 3 seconds.
- In the night or dark place, the LED of door camera is always on while this function is working.

② Volume

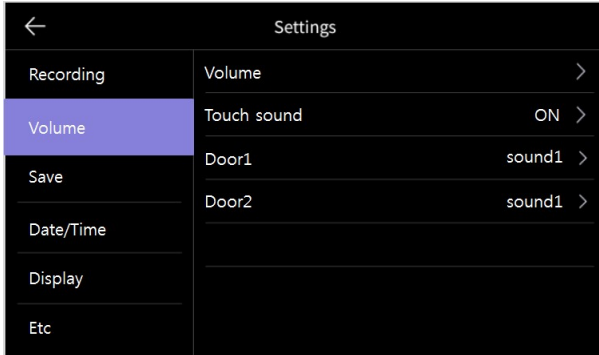

1) Volume

- When individual door camera (entrance) and intercom calls, you can change the calling tone and receiving tone individually.

- You can change the calling tone from 0 (mute) to 3 level and the receiving tone from 1 to 3 level.


2) Touch sound

- To turn on / off the touch tone.

3) Interphone calling tone (sound), Door1, Door2.

- You can select calling tone of interphone and individual door camera. (Door1, Door2)
- 6 types of calling tones are available.

③ Save (Storage)

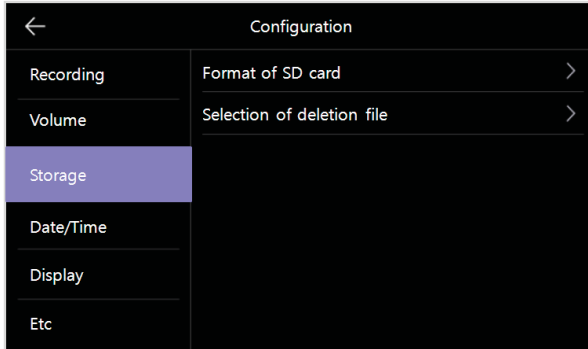

1) SD card format

- To initialize the SD card.

- It takes about 1 minutes for initialization. (It can be different by types of SD card).

2) File deletion

- To delete the saved images and videos.


- The time required varies depending on the file size.

* Cautions

- It is not available to receive a call while initializing SD card or deleting saved files.

- If you start initialization of SD card, it is not possible to stop it.
- In case of inevitable ending initialization, it is necessary to start again from the beginning.

④ Date/Time

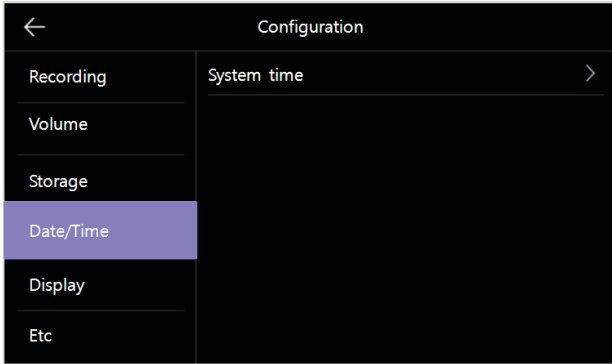


1) System time

- To Set-up Date and Time.
- The changed time will be displayed on the main screen afterward.



⑤ Display

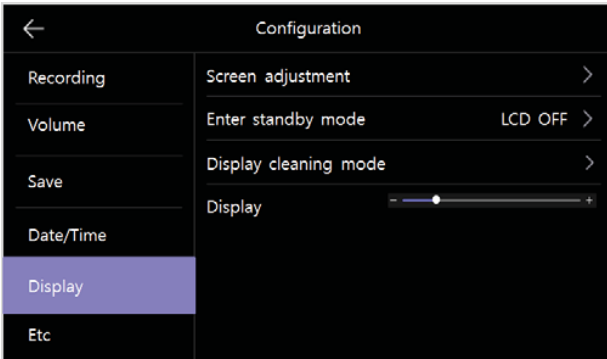

1) Display adjustment

- Brightness/ Luminosity / Chroma adjustment is available as below picture.


(In this case, you can adjust the display of door camera.)

- The range for adjustment is 0-20 level. There is a button located on the right upper for initialization.



2) Enter standby mode

- Various standby modes can be set.

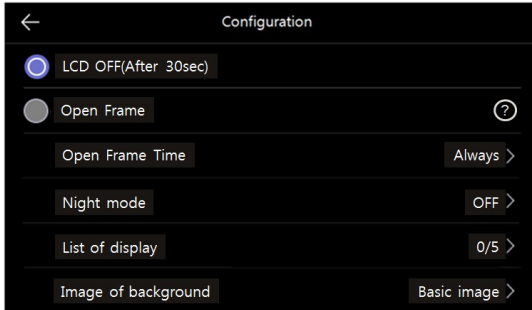



LCD OFF(After 30sec) : To set screen off function when entering standby mode

(Activated in 30 seconds after setting)


Open Frame : Enable the Openframe mode while entering standby mode

*** Caution : If motion detection function is activated, this function does not work.**

- Open Frame Time : You can set the usage time of the wallpaper frame function.

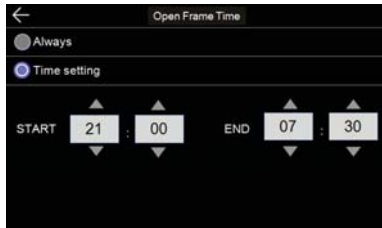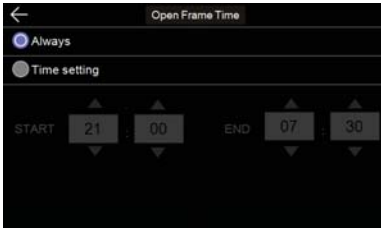


- Night mode : The brightness of the screen is minimized during the set time.

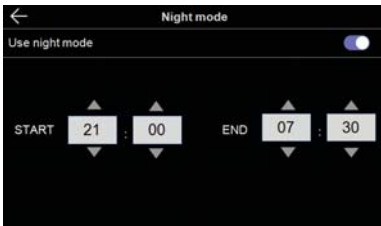

- List of display :

Set which screen to be displayed when the wallpaper frame function is applied.

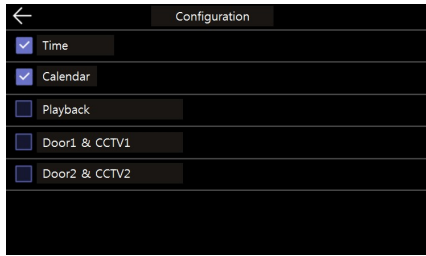

- Image of background :

Set the background image to use when applying the wallpaper frame function.



-No background image : The selected screen is displayed without background images.

-Basic image : The background is set randomly among the images stored in the internal memory.


3) Display panel cleaning mode

" - When selecting 'Cleaning mode', the touch screen is deactivated for 30 seconds.
(You cannot stop this function until it is finished.)

4) Display

- Set the brightness of the menu screen.

⑤ Etc

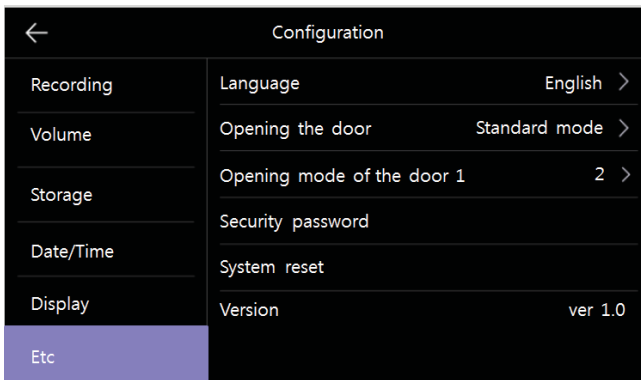

1) Language

- To select the languages.(8 languages.)

한국어	English	le français
русский	español	简体中文
Język polski	Türkçe	

2) Door-opening method

- To set up door-opening method.

Standard: To open the door during/after the calling.

Fast: To open the door before the calling.

(You do not need to make a call connection to open the door)

3) Opening mode of the door 1

- You can set 2 door mode for the door1 camera.

(In case the door camera supports 2 door mode)

4) Security password

- Set the password (4 digits) to be used to disable the security mode or to dismiss the alarm

- You cannot use 0000, 1234, 4321 as a password.

1. Enter password :

Press the button and enter the four-digit password in order using the number key generated.
(Initial value: 1234)

(If you lose the password you are using, you can restore to the default value [1234] by executing System reset),

2. Password reset: If the password is correct, the corresponding input window will be generated.

- New password: Enter the new password.

- Confirm password: Press the new password again.

(This is to prevent the wrong password being entered)

3. If the two passwords are different, an alert window will appear. Please input again

4. If they are same, the 'apply' button will be activated. Pressing the button will change the password.

* If you do not want to change during the input, please click the 'X' tab in the top left corner

4) System reset

- To proceed with initialization.

5) Version

- To display the current program version.

* Reference (SD card information)

1) Available SD card

- SDHC / SDXC: MAX 256 GBytes (Class 10 or higher)

2) FORMAT (File system) method: FAT32 (Boot the product after inserting a formatted SD card at first use)

3) Maximum storage capacity

- When SD Memory Card is not connected: Only 50 images can be saved (Embedded memory)

- When connected to SD card: Can store up to 10000 images / movies

(However, if the storage file size is large, the maximum quantity may be reduced)

	Micro SD Card		
Capacity	8GBytes	64GBytes	256GBytes(MAX)
Video (Max 120 secs)	80 Cuts	700 Cuts	2800 Cuts

<Number of movies can be saved by 120 seconds VIDEO >


* Cautions for using Micro SDHC Cards

1) Please do not turn on/off and insert/remove Micro SDHC card during playing, saving or formatting and so on. It might cause malfunction and damage products.

- 2) When the saving capacity of Image is over, then it automatically deletes the oldest Image and saving the newest Image instead.
- 3) The saving capacity of video-clip may vary depending on the environment being stored.
- 4) If memory is full, when you are saving old files may be deleted.
(Please back up your data when FULL icon is displayed.)
- 5) If you use a bad Micro SDHC card, you may experience problems with your product.





5. How to install

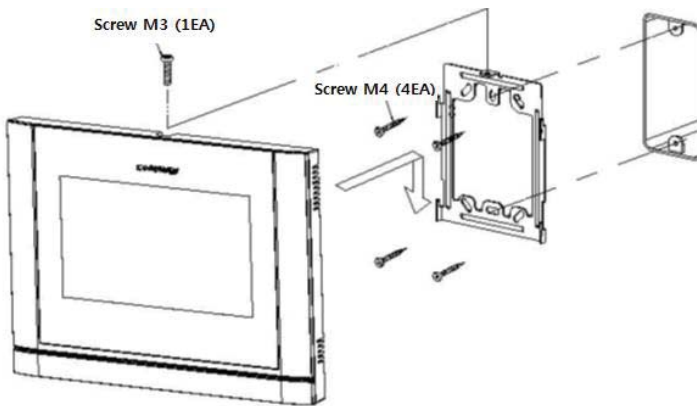

Note


- Avoid installing the product in the area of direct sunlight.
- The position of the unit's body should fit the standard height range.
(Recommended height range is 1450 ~ 1500mm)
- Avoid installing the product exposed to gas exposure, magnetic force, in humid temperatures, as it may damage the condition and performance of the product.

6. Wiring diagram

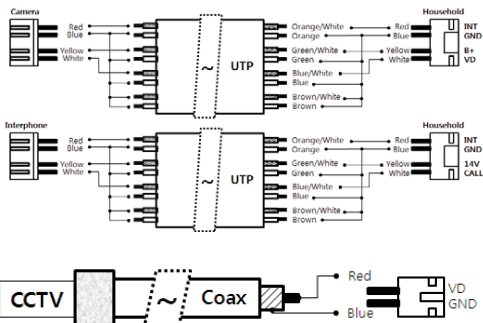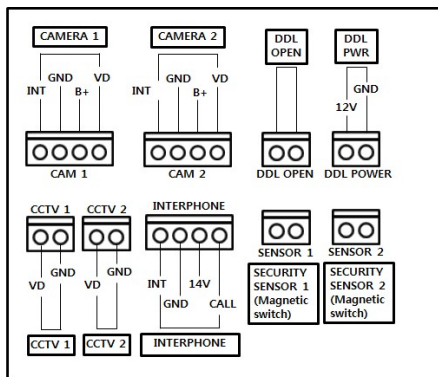

Note:


1. In case, if there is a high-voltage power line in the area of installation, use metal tube coaxial cable for wiring.
2. Beware of wrinkling of line coating and cable stick-outs as it may cause circuit shortage and operation inconvenience.
3. When connecting a monitor with a camera, make sure power switch is turned off.

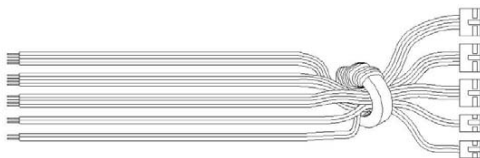

When wiring(Camera, CCTV, Interphone, sensor), please use the core provided in the package to wrap around as shown in the above



7. Package contents

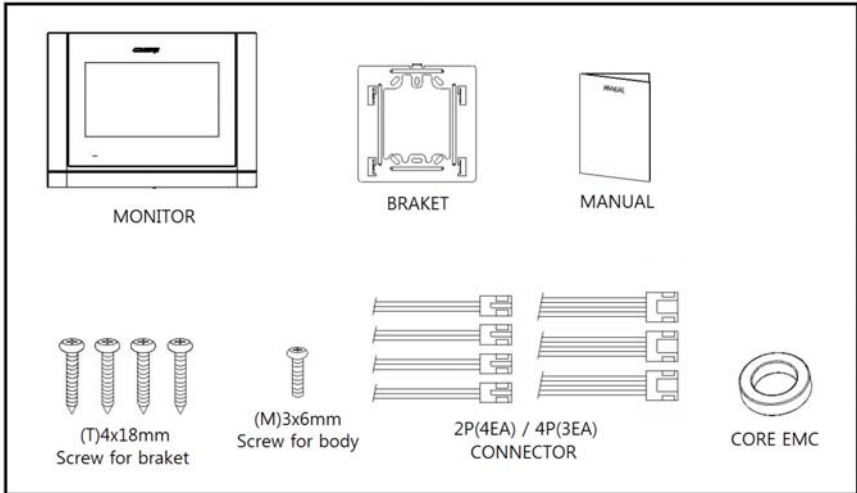

- ① Monitor(CDV-70MF)----- 1EA
- ② Wall bracket for monitor----- 1EA
- ③ User Manual----- 1EA
- ④ Wall bracket mounting screw----- 4EA
- ⑤ Monitor fixing screw----- 1EA
- ⑥ Connector 2P----- 4EA
Connector 4P----- 3EA
- ⑦ CORE EMC OR29*7.5-19H----- 1EA

* Connecting Devices

Door Camera / CCTV : AHD camera (up to 2 Megapixel)



8. Specifications

Model	CDV-70MF	
Transmission Method	Camera 4 wire (polarity), CCTV 2 wire (polarity) Interphone 4 wire (polarity), Sensor 2 wires(non polarity)	
Power Source	100V-240V~, 50/60Hz	
Consumption	Stand-by : 3.5 W Max : 15 W	
Intercom system	HANDS FREE type (Voice switch circuit)	
Monitor	7" FULL TOUCH LCD	
Video subscription time	Individual door camera monitoring: 30 ±5sec Call connection / Calling: 60 ±5sec	
Wiring Distance	UTP CAT 5e. Standard (ø 0.5)	Camera / CCTV / Interphone <-> Household unit (monitor)
		28 meters (MAX)
		Resistance under 10Ω per 100 meters on UTP Cat 5e
Operating Temp.	0 ~ +40°C (32°F ~ 104°F)	



9. Safe operation guide

- Make sure to turn on the product.
- In case if physical damage or operation failure is detected, do not hesitate to contact Service Center.
- All electric power must be blocked by the building blocking device.
- Do not place water bottles or flowerpots upon the product.
- Please, turn the power off when installing or repairing the product.

COMMAX

COMMAX Co.,Ltd.

513-11, Sangdaewon-dong, Jungwon-gu, Seongnam-si, Gyeonggi-do, Korea

Int'l Business Dept. Tel. : +82-31-7393-540~550 Fax. : +82-31-745-2133

Web site : www.commax.com

PM0771UM0010

Printed In Korea / 2014.08.104