Digital VTH

User's Manual

V1.0.0

Foreword

General

This document mainly introduces function, structure, networking, installation process, debugging, UI operation and technical parameter of digital VTH products. Read carefully before using the device, and keep the manual safe for future reference.

Safety Instructions

The following categorized signal words with defined meaning might appear in the Manual.

Signal Words	Meaning
DANGER	Indicates a high potential hazard which, if not avoided, will result in death or serious injury.
WARNING	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.
CAUTION	Indicates a potential risk which, if not avoided, could result in property damage, data loss, lower performance, or unpredictable result.
TIPS	Provides methods to help you solve a problem or save you time.
NOTE	Provides additional information as the emphasis and supplement to the text.

Revision History

Version	Revision Content	Release Time
V1.0.0	First release.	November 2020

Privacy Protection Notice

As the device user or data controller, you might collect the personal data of others such as their face, fingerprints, and license plate number. You need to be in compliance with your local privacy protection laws and regulations to protect the legitimate rights and interests of other people by implementing measures which include but are not limited: Providing clear and visible identification to inform people of the existence of the surveillance area and provide required contact information.

About the Manual

- The manual is for reference only. Slight differences might be found between the manual and the product.
- We are not liable for losses incurred due to operating the product in ways that are not in compliance with the manual.

- The manual will be updated according to the latest laws and regulations of related jurisdictions. For detailed information, see the paper user's manual, use our CD-ROM, scan the QR code or visit our official website. The manual is for reference only. Slight differences might be found between the electronic version and the paper version.
- All designs and software are subject to change without prior written notice. Product updates might result in some differences appearing between the actual product and the manual. Please contact customer service for the latest program and supplementary documentation.
- There might be errors in the print or deviations in the description of the functions, operations and technical data. If there is any doubt or dispute, we reserve the right of final explanation.
- Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks and company names in the manual are properties of their respective owners.
- Please visit our website, contact the supplier or customer service if any problems occur while using the device.
- If there is any uncertainty or controversy, we reserve the right of final explanation.

Important Safeguards and Warnings

This section introduces content covering the proper handling of the device, hazard prevention, and prevention of property damage. Read carefully before using the device, comply with the guidelines when using it.

Operation Requirements

- Check whether the power supply is correct before use.
- Do not unplug the power cord on the side of the device while the adapter is powered on.
- Operate the device within the rated range of power input and output.
- Transport, use and store the device under allowed humidity and temperature conditions.
- Do not drop or splash liquid onto the device, and make sure that there is no object filled with liquid on the device to prevent liquid from flowing into it.
- Do not disassemble the device without professional instruction.

Installation Requirements

- Do not connect the power adapter to the device while the adapter is powered on.
- Strictly comply with the local electric safety code and standards. Make sure the ambient voltage is stable and meets the power supply requirements of the device.
- Do not connect the device to two or more kinds of power supplies, to avoid damage to the device.
- Improper use of the battery might result in a fire or explosion.

- Personnel working at heights must take all necessary measures to ensure personal safety including wearing a helmet and safety belts.
- Do not place the device in a place exposed to sunlight or near heat sources.
- Keep the device away from dampness, dust, and soot.
- Install the device on a stable surface to prevent it from falling.
- Install the device in a well-ventilated place, and do not block its ventilation.
- Use an adapter or cabinet power supply provided by the manufacturer.
- Use the power cords that are recommended for the region and conform to the rated power specifications.
- The power supply must conform to the requirements of ES1 in IEC 62368-1 standard and be no higher than PS2. Please note that the power supply requirements are subject to the device label.
- The device is a class I electrical appliance. Make sure that the power supply of the device is connected to a power socket with protective earthing.

Table of Contents

Foreword ..... **I**
Important Safeguards and Warnings ..... **III**
1 Product Overview **1**
Introduction 1
Function 1
2 Network Diagram **3**
2-wire System 3
Digital System 3
3 Preparation and Commissioning **6**
Preparation 6
3.1.1 VTO Settings 6
3.1.2 VTH Settings 13
Commissioning 24
3.2.1 VTO Calling VTH 24
3.2.2 VTH Monitoring VTO 25
4 Screen Operation **26**
Home Screen 26
Call 27
4.2.1 Recent Call 27
4.2.2 Contact 28
4.2.3 Calling User 29
4.2.4 Calling from User 31
4.2.5 Calling from VTO 32
Information 33
4.3.1 Security Alarm 33
4.3.2 Guest Message 34
4.3.3 Publish Information 34
4.3.4 Video Pictures 35
Monitor 35
4.4.1 Monitoring VTO 36
4.4.2 Monitoring IPC 38
4.4.3 Favorite 40
SOS 41
Setting 41
4.6.1 Ring Settings 41
4.6.2 Card Information 44
4.6.3 Alarm Setting 45
4.6.4 Mode Setting 48
4.6.5 Forward Setting 49
4.6.6 General Setting 50
4.6.7 Product Information 56
Project Settings 57
4.7.1 Forgetting Password 57

4.7.2 Network Settings 58
4.7.3 VTH Configuration 58
4.7.4 VTO Configuration 58
4.7.5 Default 58
4.7.6 Reset MSG 59
Unlock Function 59
Arm and Disarm Function 59
4.9.1 Arm 59
4.9.2 Disarm 60
5 DSS Agile VDP 62
Downloading the App 62
Registration and Login 63
Call Functions 64
5.3.1 Forwarding Calls 65
5.3.2 Calling Operations 67
Monitoring 67
Call Records 69
Message 71
Visitor 74
5.7.1 Creating Pass 74
5.7.2 Visiting Records 76
Setting 77
Cybersecurity Recommendations 79

1 Product Overview

Introduction

A digital VTH is device that can perform monitoring, voice/video call, and door unlock.

Function

Wi-Fi Networking

Connect to Wi-Fi networks.

Video/Voice Call

Make video or voice call to other VTOs and VTHs.

Monitoring

Monitor fence station, VTO and IPC devices (only supported by certain models).

SOS

Make emergency call to the Call Center.

Auto Snapshot

Take snapshots when calling or monitoring, and store them in the SD card.

DND (Do Not Disturb)

Mute all message and call notifications.

Remote Unlock

Unlock doors remotely.

Arm and Disarm

Arm and disarm 6 alarm devices.

Playback

Play back videos and pictures in the SD card.

Alarm

Alarms will trigger linkage and be sent to the Call Center.

Record

View call and alarm records.

Message

View messages, including videos, pictures and announcements.

2 Network Diagram

2-wire System

Network diagram of 2-wire system

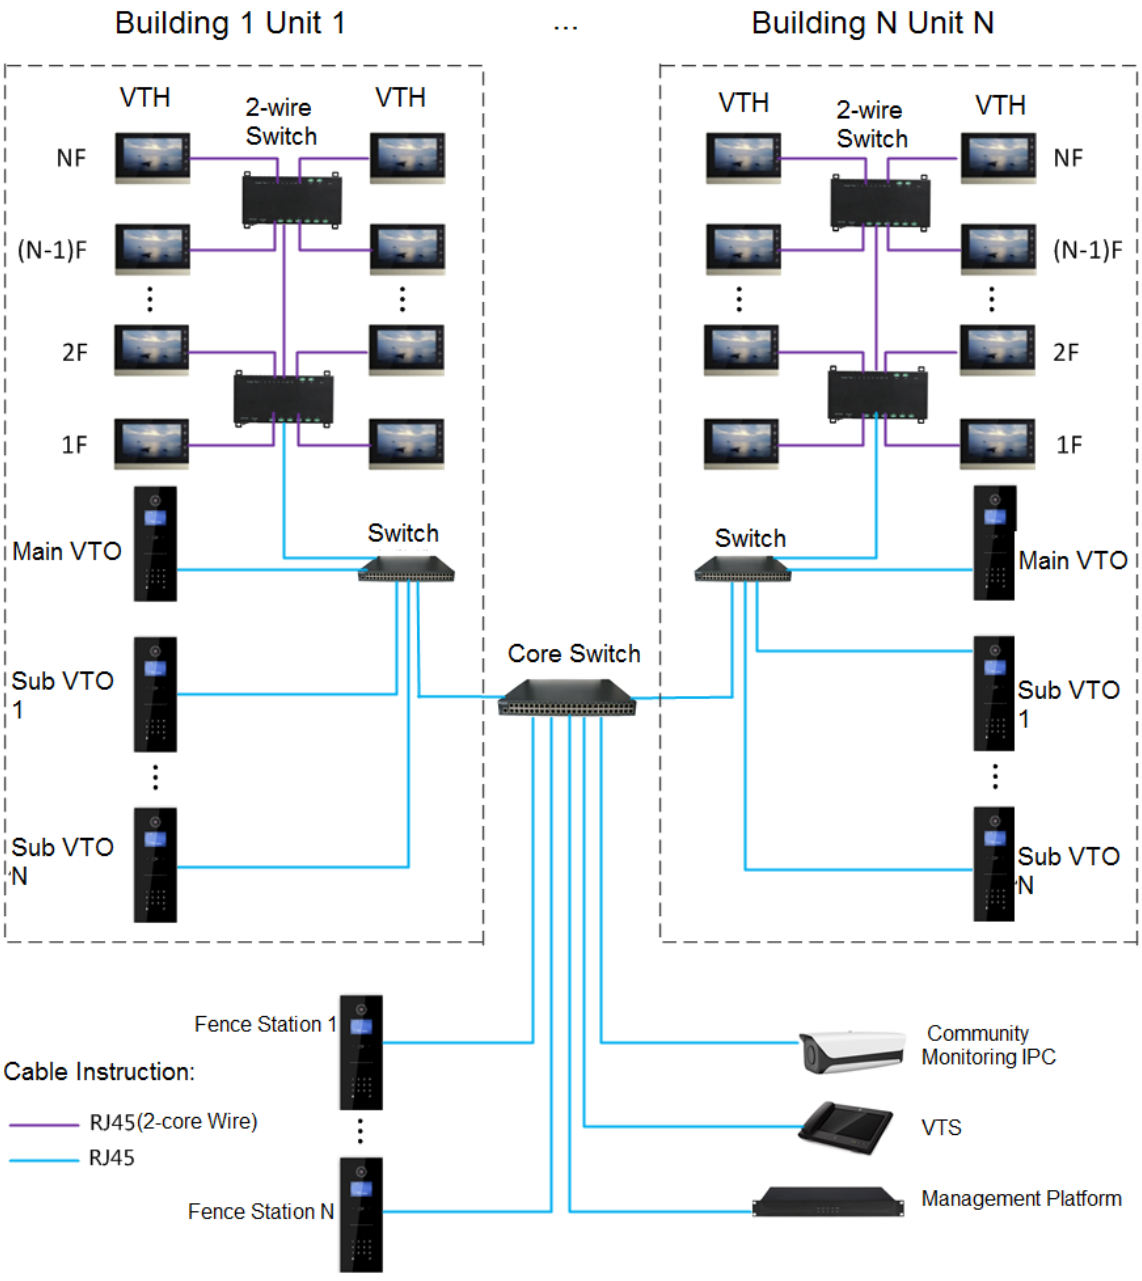

Digital System

There are two types of digital system network:

z The VTH powered through PoE from the floor switch.

Network diagram of digital system (1)

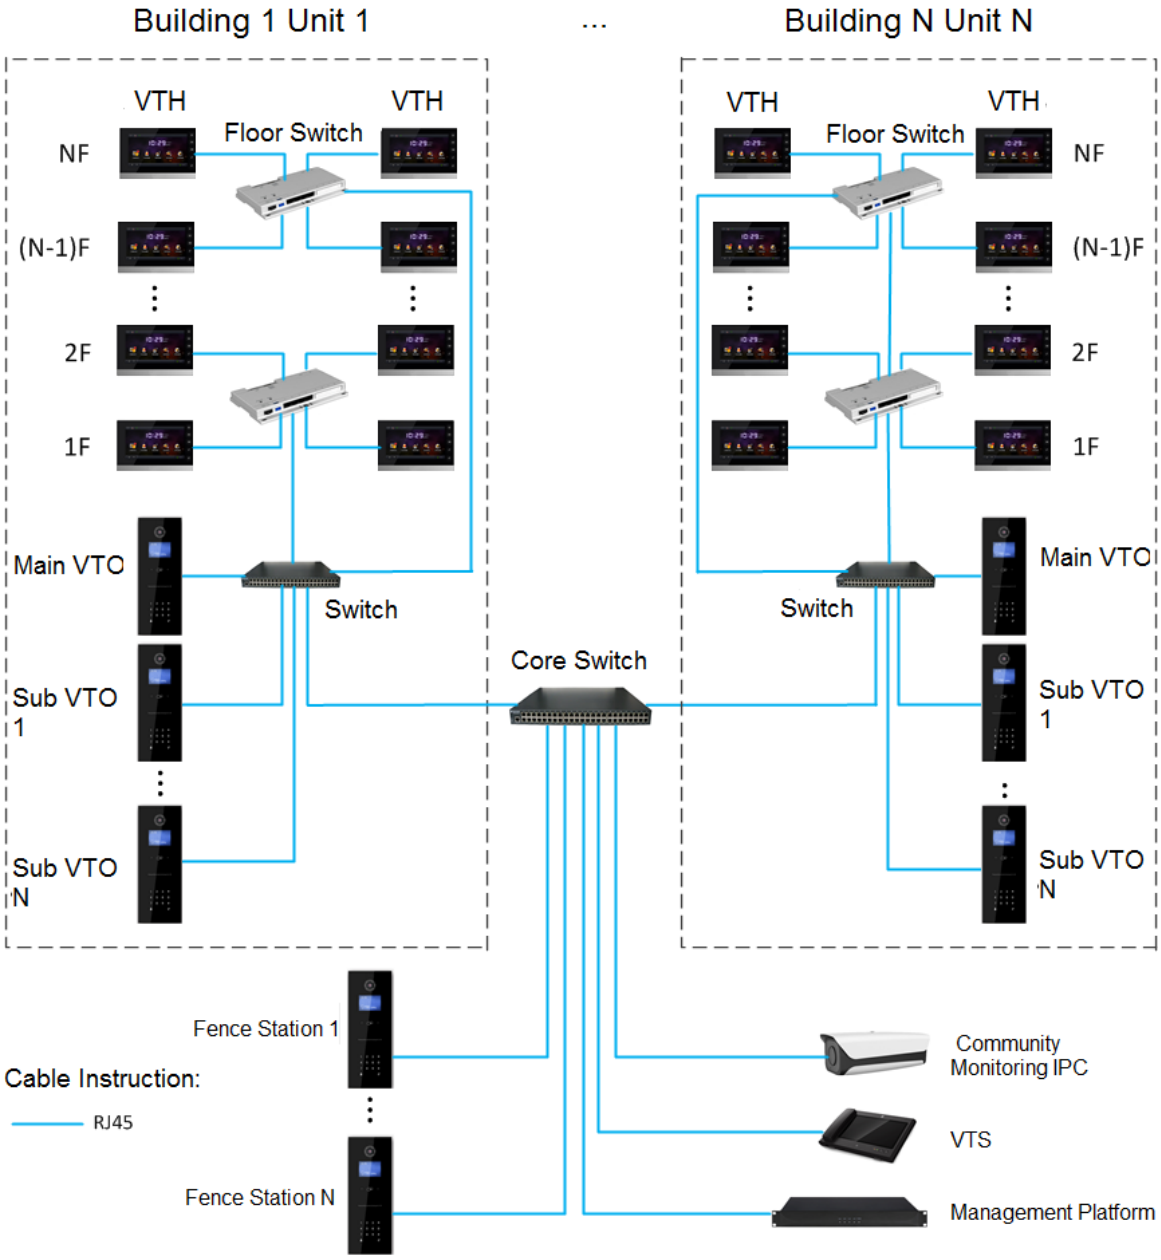

z The VTH is independently powered through a power supply.

Network diagram of digital system (2)

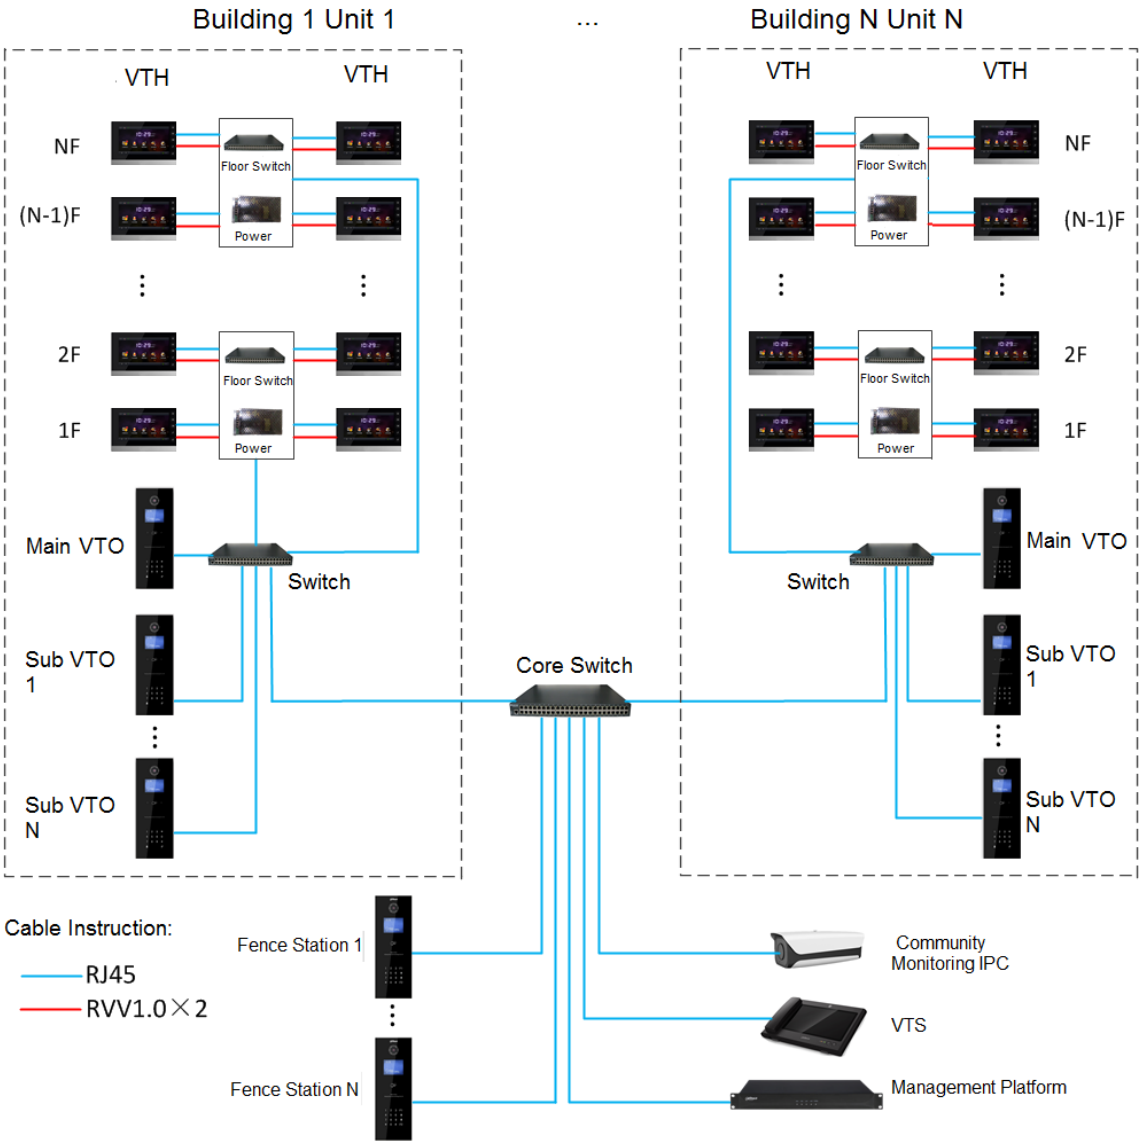

3 Preparation and Commissioning

Carry out commissioning to ensure that the device can realize basic network access, call and monitoring functions.

Preparation

Before commissioning:

- Power on the device only after there is no short or open circuit.
- Plan IP addresses and numbers (works as phone numbers) for every VTO and VTH.
- Confirm the position of the SIP server.

- The device must be used with a VTO that is the SIP server. This section takes a unit VTO as an example. See corresponding user's manuals for other VTO types.
- Log in to the web page of every VTO and VTH and configure all relevant information.

3.1.1 VTO Settings

3.1.1.1 Initialization

For the first-time use, you must initialize the device.

Make sure that the IP addresses of the PC and VTO are in the same network segment. The default IP address of VTO is 192.168.1.108.

Power on the VTO.

Go to the default IP address of VTO in the browser.

Device initialization

Enter the password and confirm it, and then click **Next**.

This password is used to log in to the web page. It must be at least 8 characters, and include a combination of at least two types among number, letter and symbol.

Set an email address

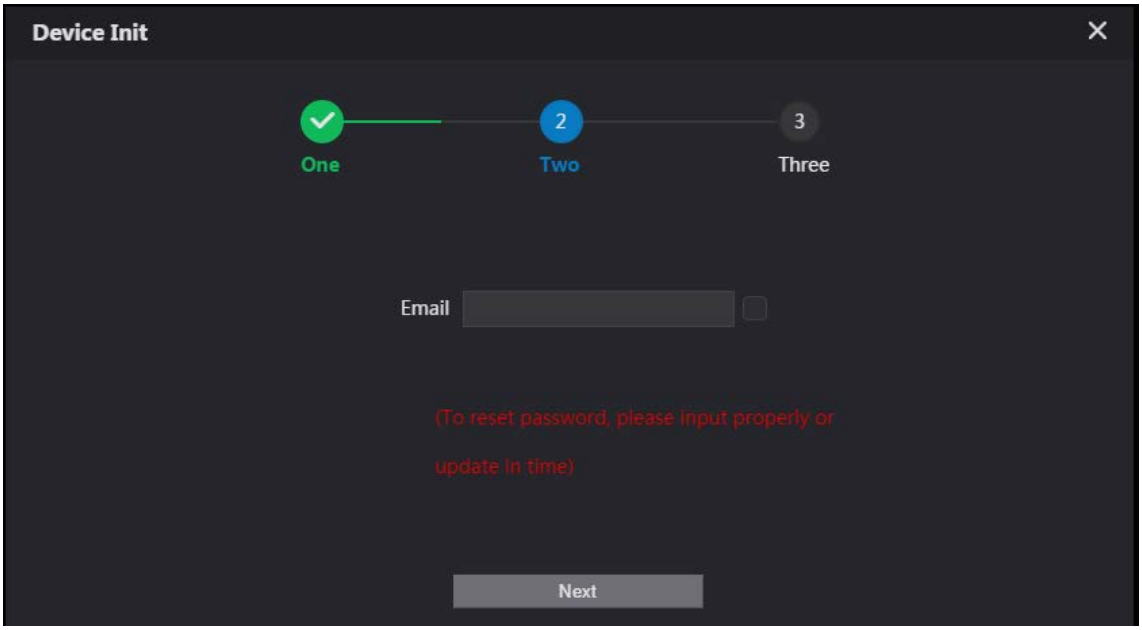

Select **Email** and enter your email address for resetting password.

Click **Next**.

Initialization successful

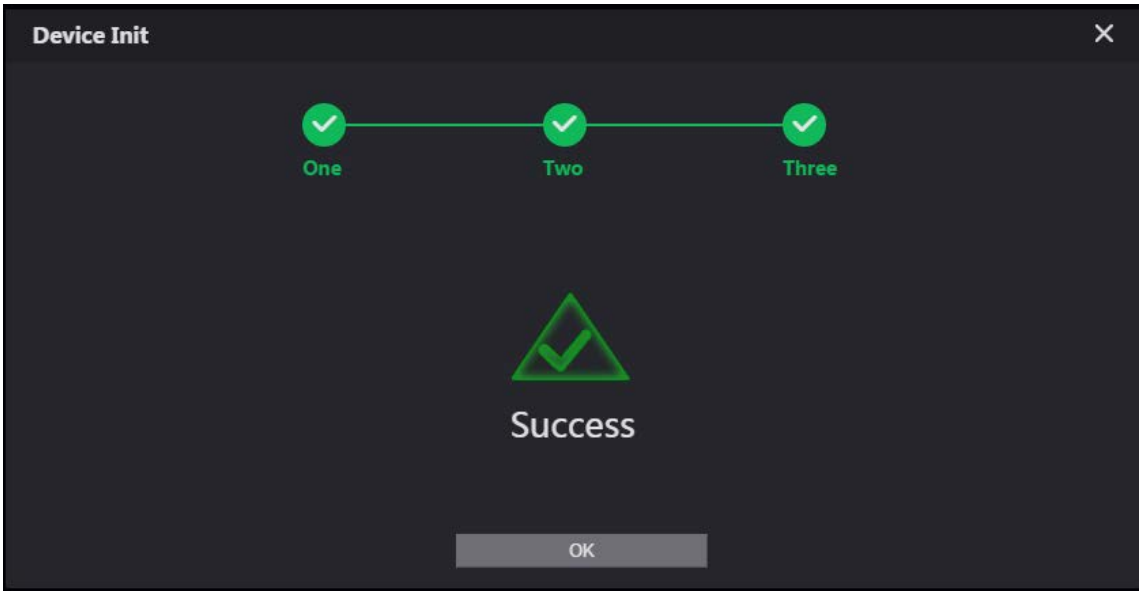

Click **OK** and the it goes to the login web page.

Log in to web page

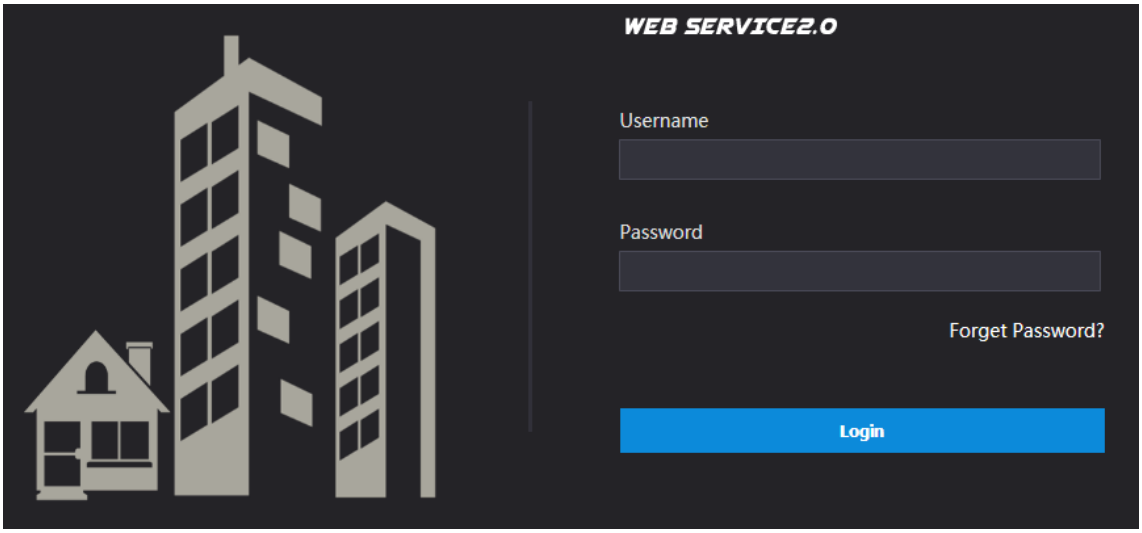

Enter username (admin by default) and password, and then click **Login**.

3.1.1.2 Network Parameters

Change the IP address of the VTO to the one that you planned.

Select **Network Setting > Basic**.

TCP/IP

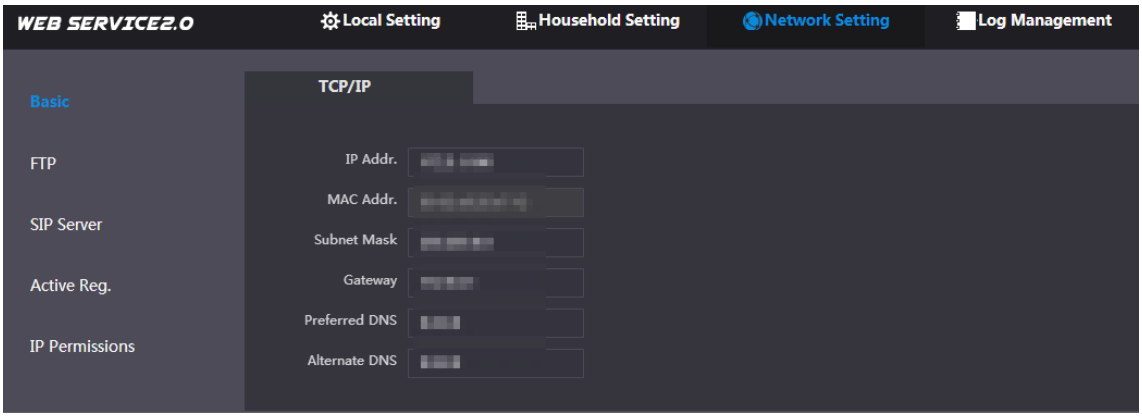

Enter the parameters, and then click **OK**.

The VTO automatically restarts. Make sure that the PC is in the same network segment as the VTO to log in again.

3.1.1.3 System Type

Select **Local Setting > Basic**.

Device properties

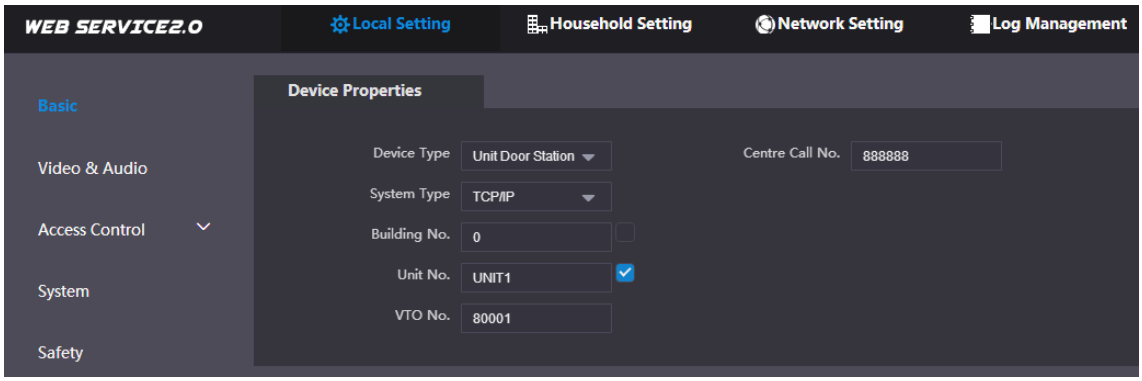

Select **System Type** to **TCP/IP**.

Click **OK**.

Wait for the device to automatically restart or restart it manually, and then the settings will take effect.

3.1.1.4 Server Type

You can select the type of the server that manages all VTO devices.

Select **Network Setting > SIP Server**.

SIP server (1)

Select a server type.

- When this VTO or another VTO works as the SIP server, select **Server Type** to **VTO**. It applies to a scenario where there is only one building.
- When a platform (such as Express/DSS) works as the SIP server, select **Server Type** to **Express/DSS**. It applies to a scenario where there are multiple buildings.

3.1.1.5 SIP Server

Select **Network Setting > SIP Server**.

Configure SIP server.

- The current VTO works as the SIP server.
  Enable **SIP Server**, and then click **OK**. The VTO automatically restarts, and it goes to the login web page.

If the current VTO is not the SIP server, do not enable **SIP Server**; otherwise the connection will fail.

- Another VTO works as the SIP server.
  Disable **SIP Server**, configure the parameters, and then click **OK**. The VTO automatically restarts, and it goes to the login web page.

Table 3-1 SIP server parameters when a VTO works as the SIP server

Parameter	Description
IP Address	IP address of the VTO that works as the SIP server.
Port	5060 by default.
Username	Keep it default.
Password	
SIP Domain	Keep it default.
Login Username	SIP server login username and password.
Login Pwd	

- The platform (Express/DSS) works as the SIP server.
- Select **Server Type** as **Express/DSS,** configure the parameters, and then click **OK**. The VTO automatically restarts, and it goes to the login web page.

Table 3-2 SIP server parameters when the platform works as the SIP server

Parameter	Description
IP Address	IP address of the platform.
Port	5080 by default.
Username	Keep it default.
Password	
SIP Domain	Keep it default or null.
SIP Server Username	SIP server login username and password.
SIP Server Password	

- VTO settings have been completed if the platform or another VTO works as the SIP server.
- If the current VTO works as the SIP server, **Device Manager** will appear on the left. See "3.1.1.6 Adding VTO " and "3.1.1.7 Adding VTH " to add VTOs and VTHs.

3.1.1.6 Adding VTO

Add VTO only when the current VTO works as the SIP server.

Log in to the web page of the VTO.

Select **Household Setting > VTO No. Management**.

VTO number management

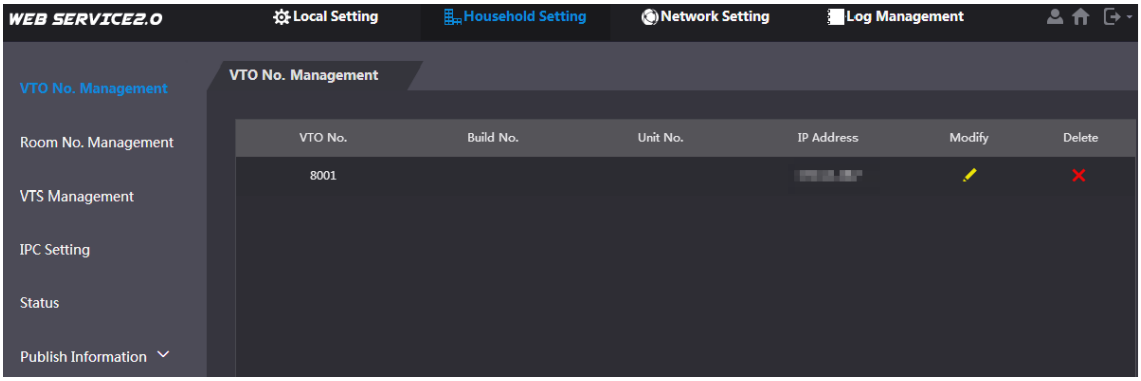

Click **Add**.

Add a VTO

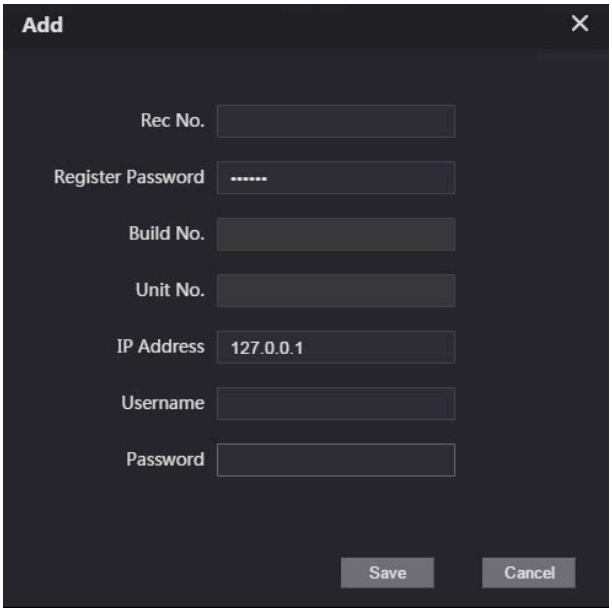

Configure the parameters.

Table 3-3 Parameters of adding a VTO

Parameter	Description
Rec No.	VTO number.
Register Password	Keep it default.
IP Address	IP address of VTO.
Username	Web page login username and password of this VTO.
Password	

Click **OK**.

Do Step 3–Step 5 to add other VTOs.

3.1.1.7 Adding VTH

- Add VTHs only when the current VTO works as the SIP server.
- Add both main and extension VTHs.

Select **Household Setting** > **Room No. Management**.

Room number management

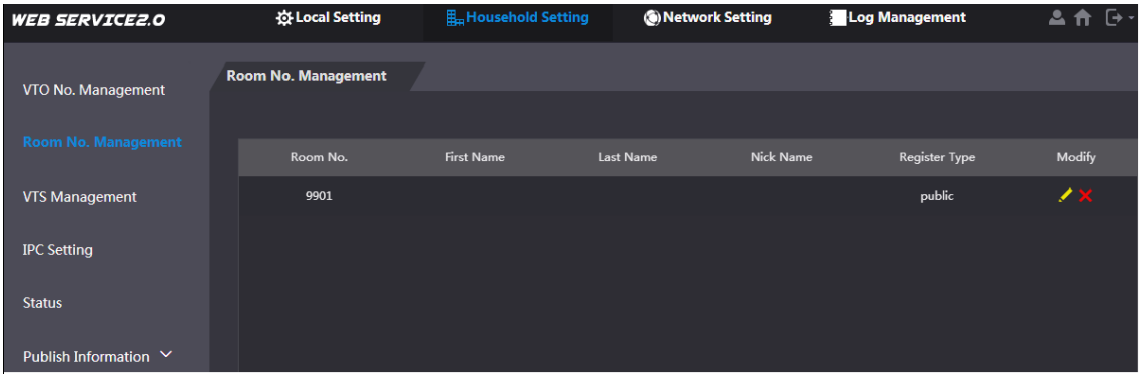

Click **Add**.

Add a VTH

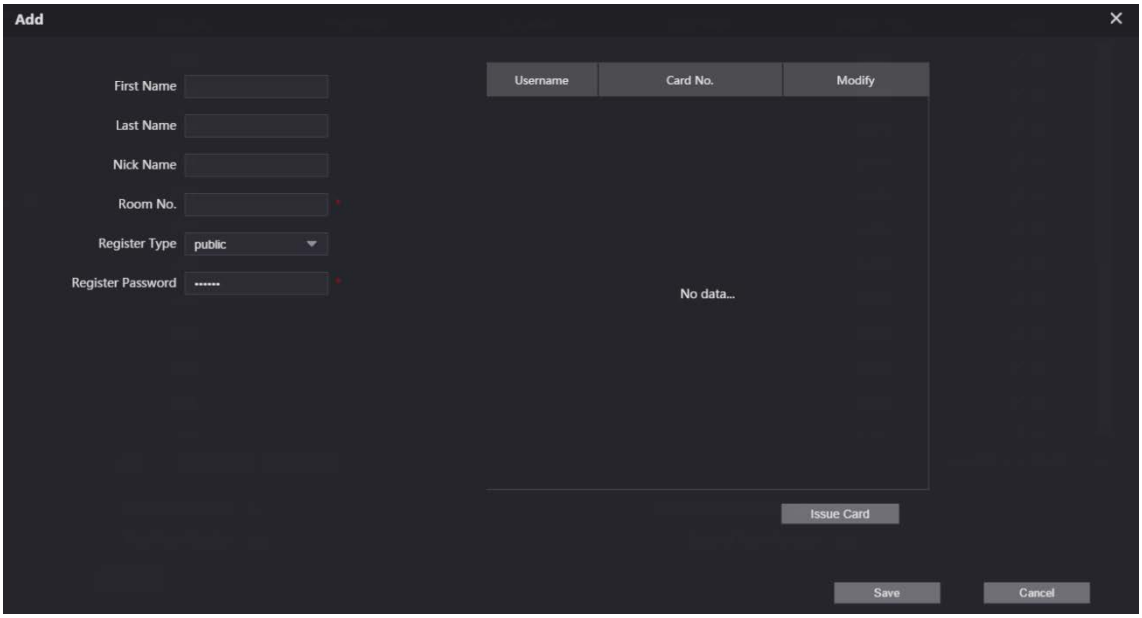

Configure the parameters.

Table 3-4 Parameters of adding a VTH

Parameter	Description
First Name	Information to distinguish each device.
Last Name	
Nick Name	
Room No.	z VTH number consists of 1–6 numbers, which may include number and #. It must be consistent with room number configured at the VTH. z When there are main VTH and extensions, to use group call function, the main VTH number must end with #0, and the extension VTH number must end with #1, #2 and #3. For example, if the main VTH is 101#0, extension VTHs must be 101#1, 101#2…
Register Password	Keep it default.
Register Type	

Click **OK**.

Do Step 2–Step 4 to add other VTHs.

3.1.2 VTH Settings

3.1.2.1 Initialization

Select a region and language.

Select a region and language

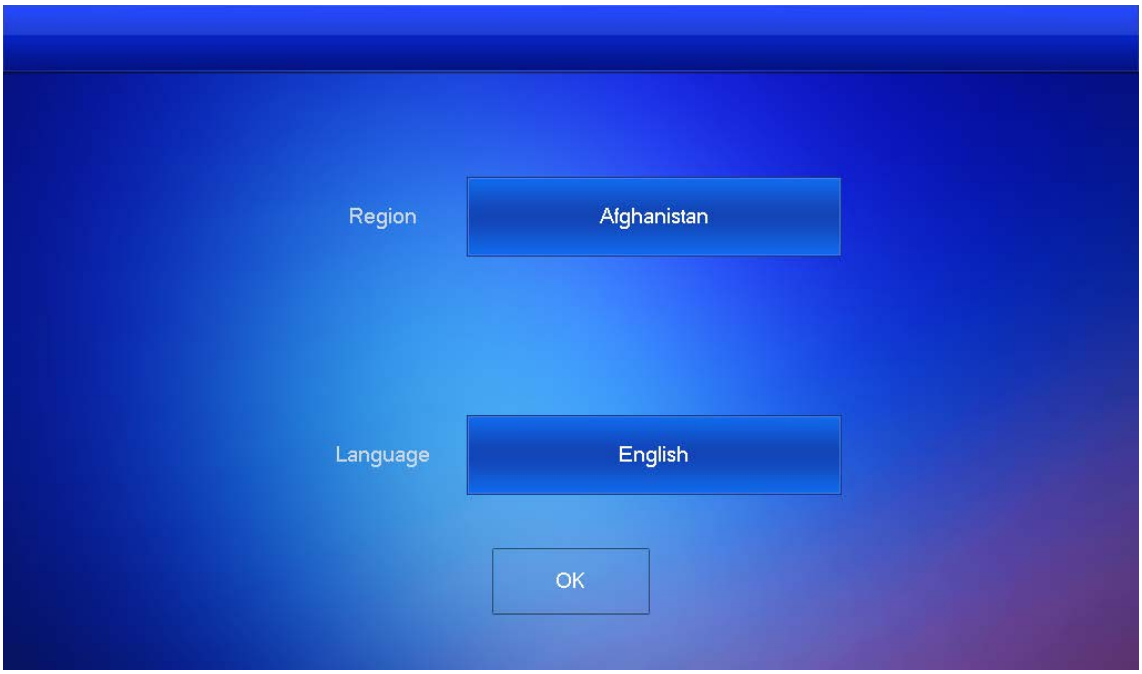

Select **Apartment** or **Villa**, and then tap **OK**.

This section takes **Villa** as an example.

Select apartment or villa

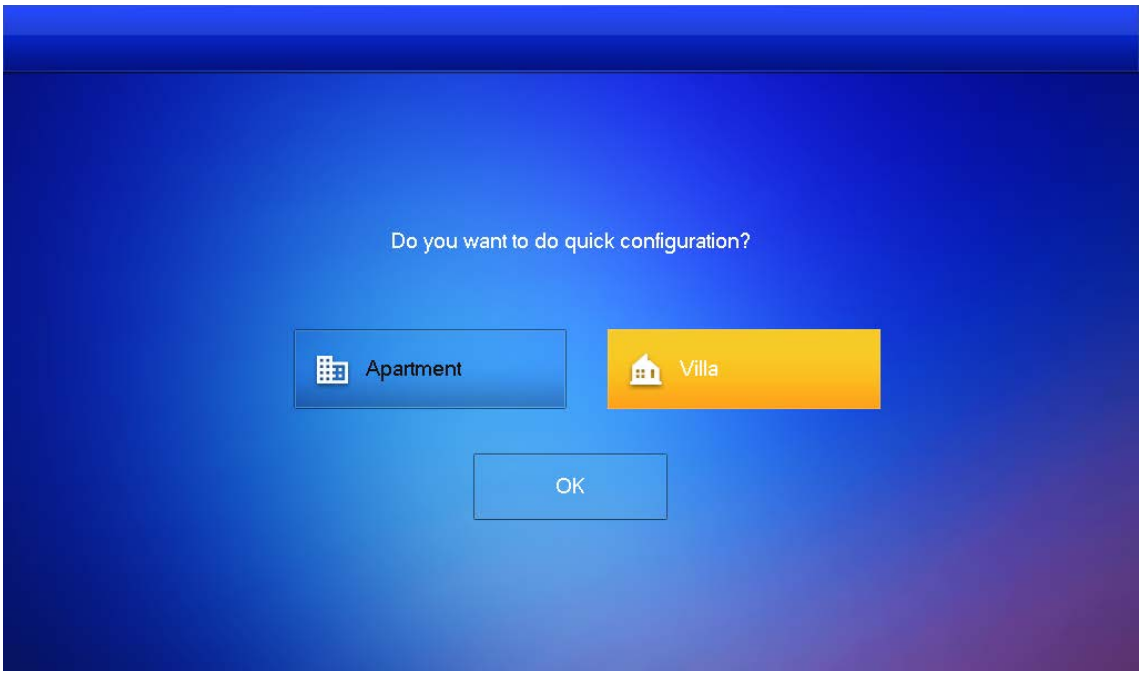

Select **First-time Config** and tap **OK**.

First-time configuration

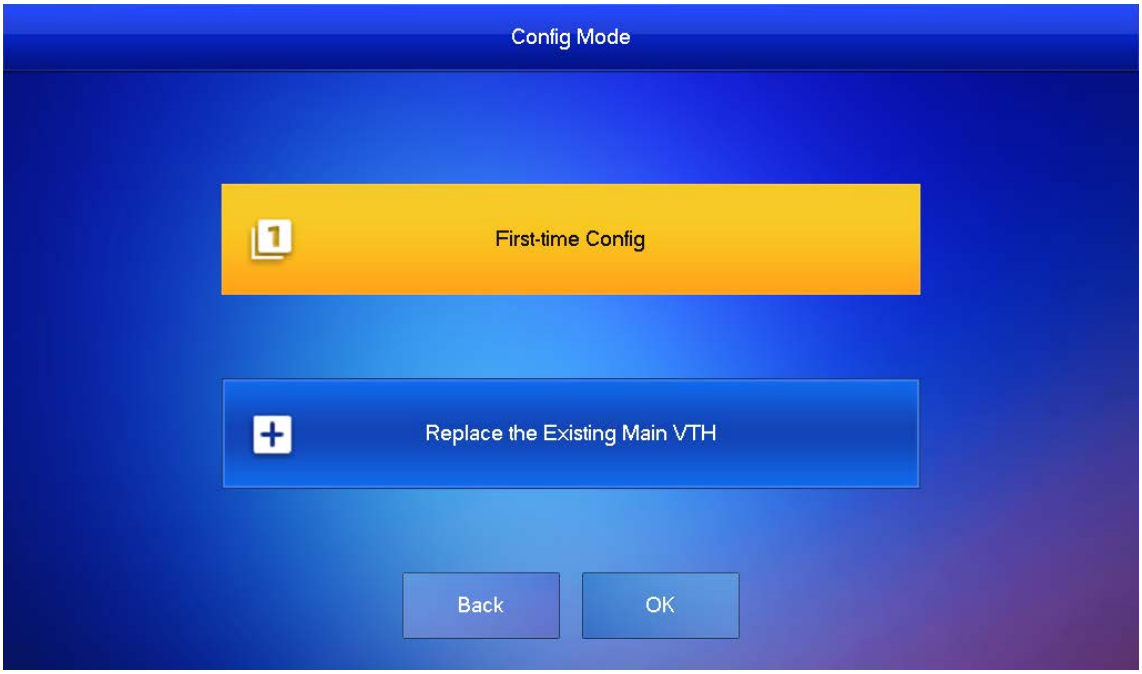

DHCP is selected by default, or select **Static IP** and configure the parameters as needed.

DHCP

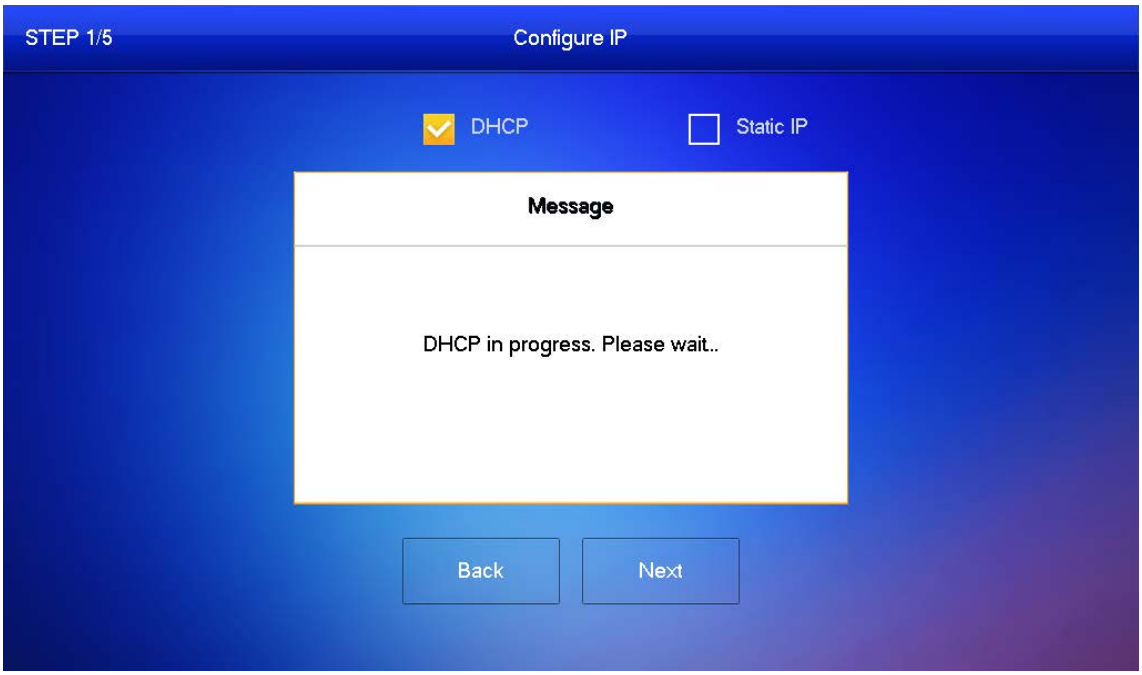

Static IP

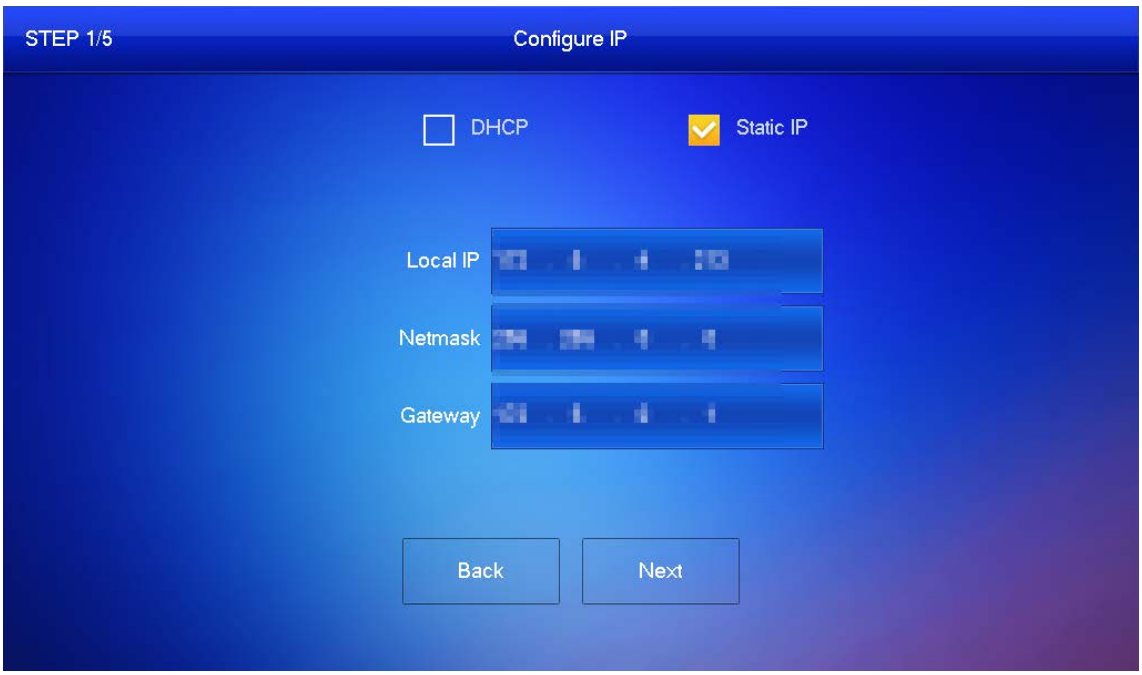

Set a password and an email address for the VTH, and then tap **Next**.

- The password is used to enter project setting screen.
- If you select **Apartment** in Step 2, initialization is completed with this step.

Set a password an email address for the VTH

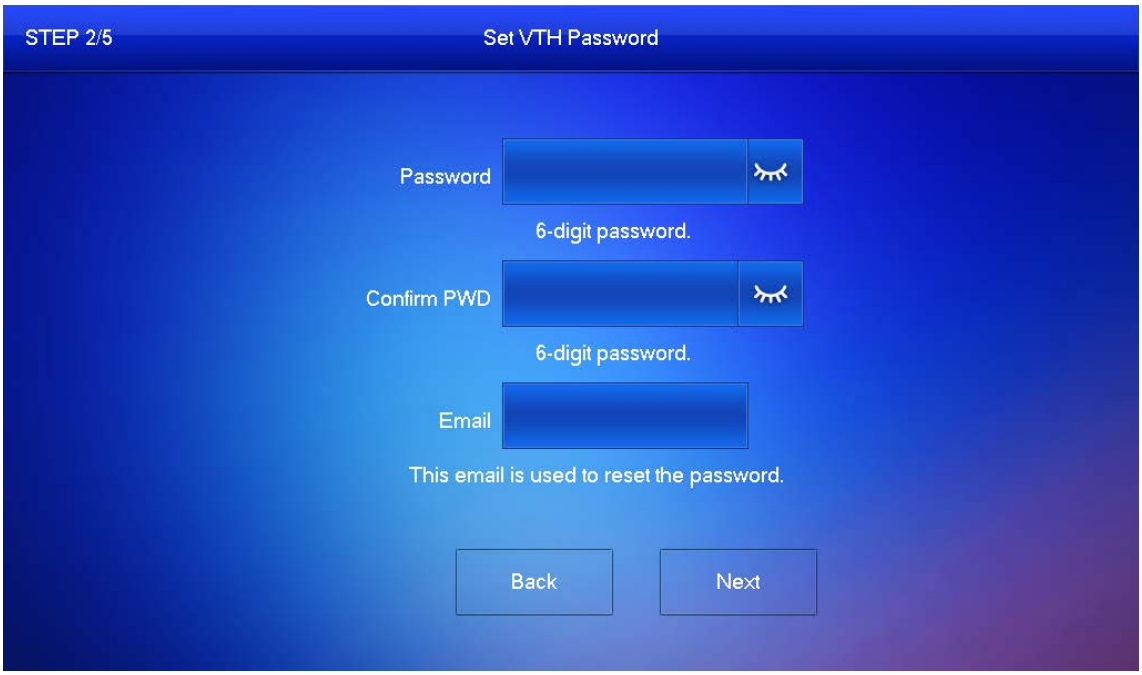

Set a password and an email address for the VTO.

The password is used to enter project setting.

Set a password an Email address for the VTO

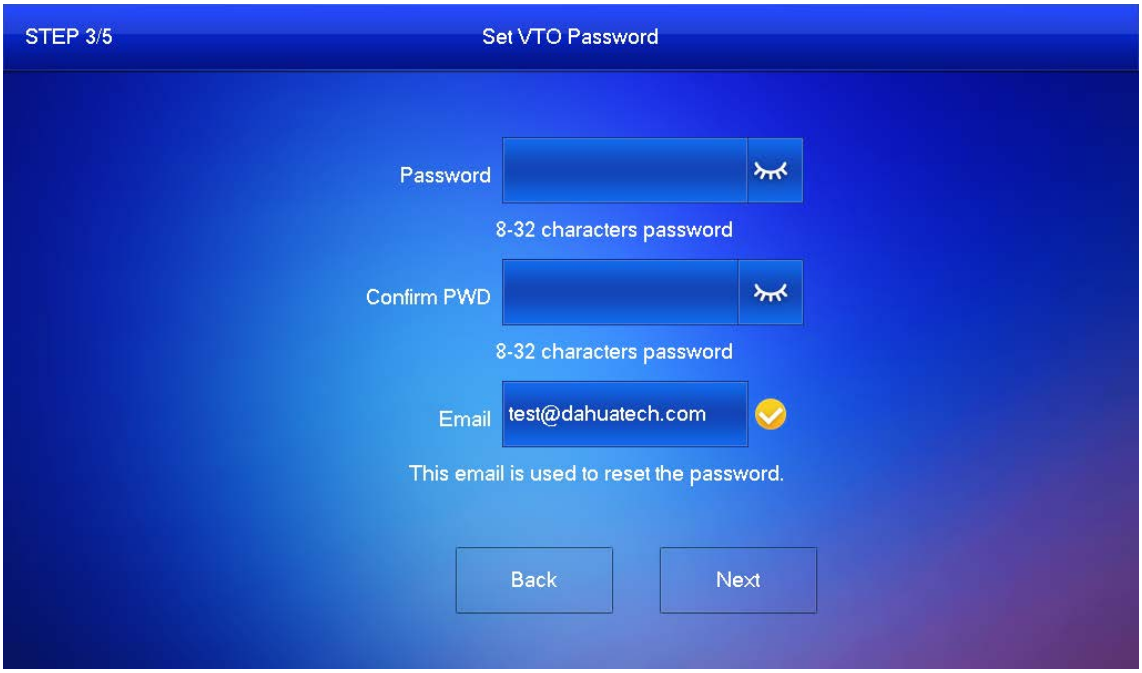

Click **Initialize** to initialize a single device or **Batch Initialization** to initialize all available devices, and then click **Next**.

Initialize devices

Click **One-key Config** to go to the home screen of the VTH.

Network configuration

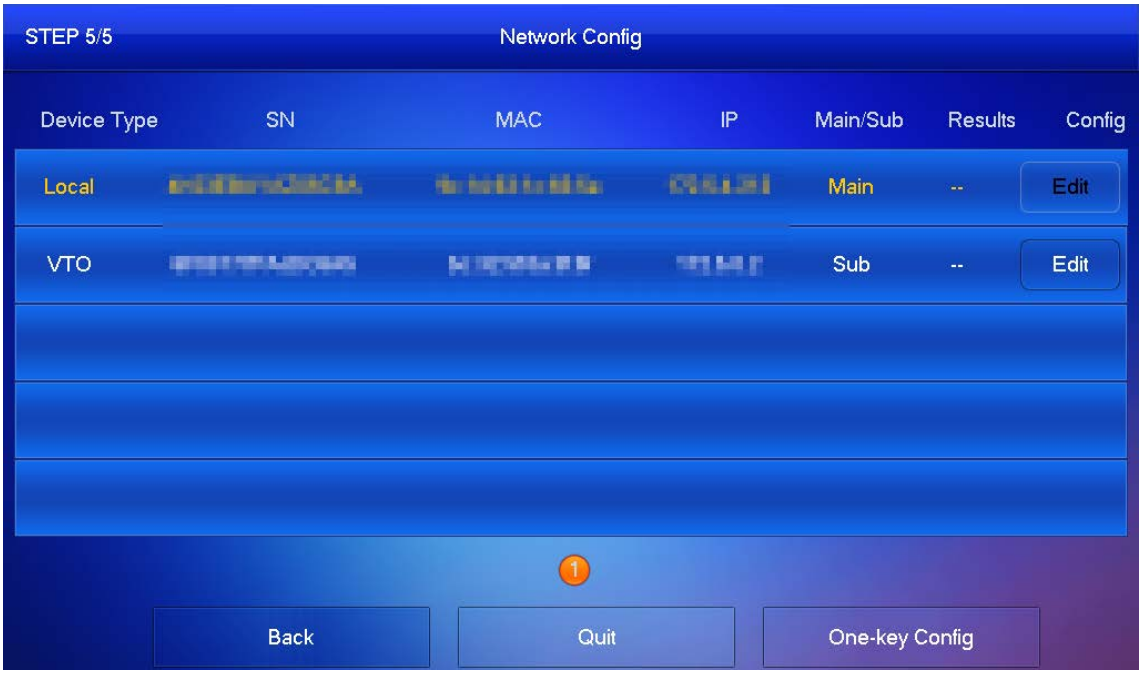

Home screen

3.1.2.2 Network Parameters

IP addresses of all VTHs and VTOs must be in the same network segment. Otherwise, the VTH will fail to obtain VTO information.

On the home screen, tap **Setting** for about 3 seconds.

Enter the password and tap **OK**.

Tap **Network**.

Configure the parameters.

- LAN: Enter the information, and then tap **OK**; or turn on **DHCP** to obtain the information automatically.

LAN

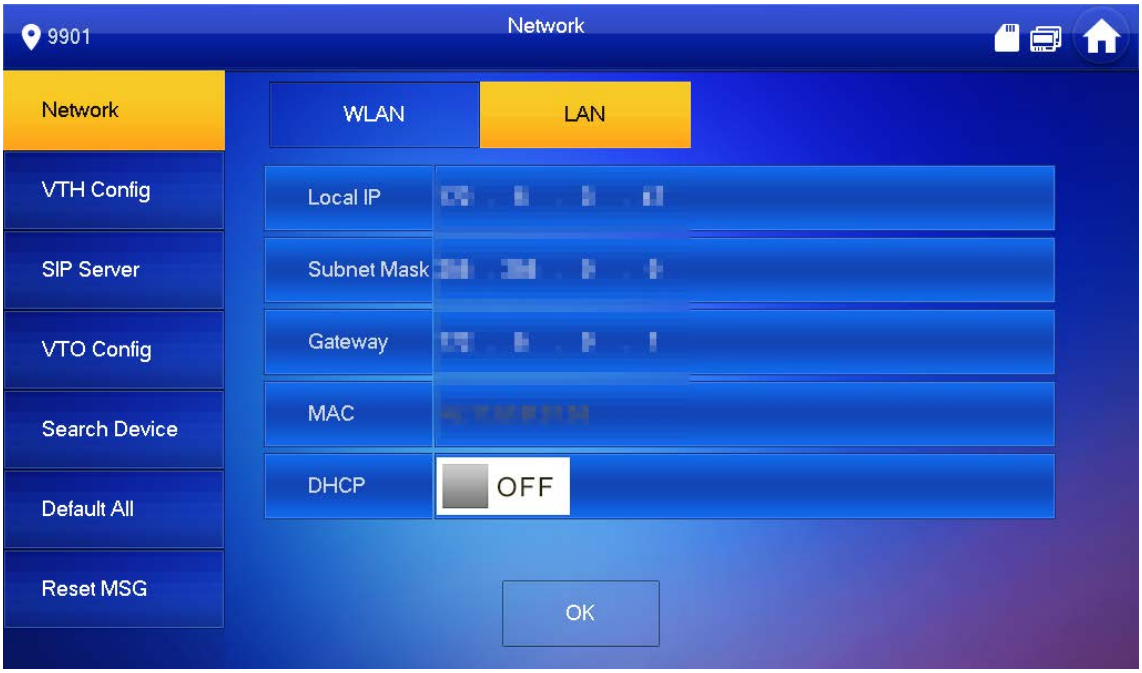

z WLAN

z Only certain models support WLAN function.

z Use a router with secured encryption protocols.

1) Turn on the WLAN function.

WLAN

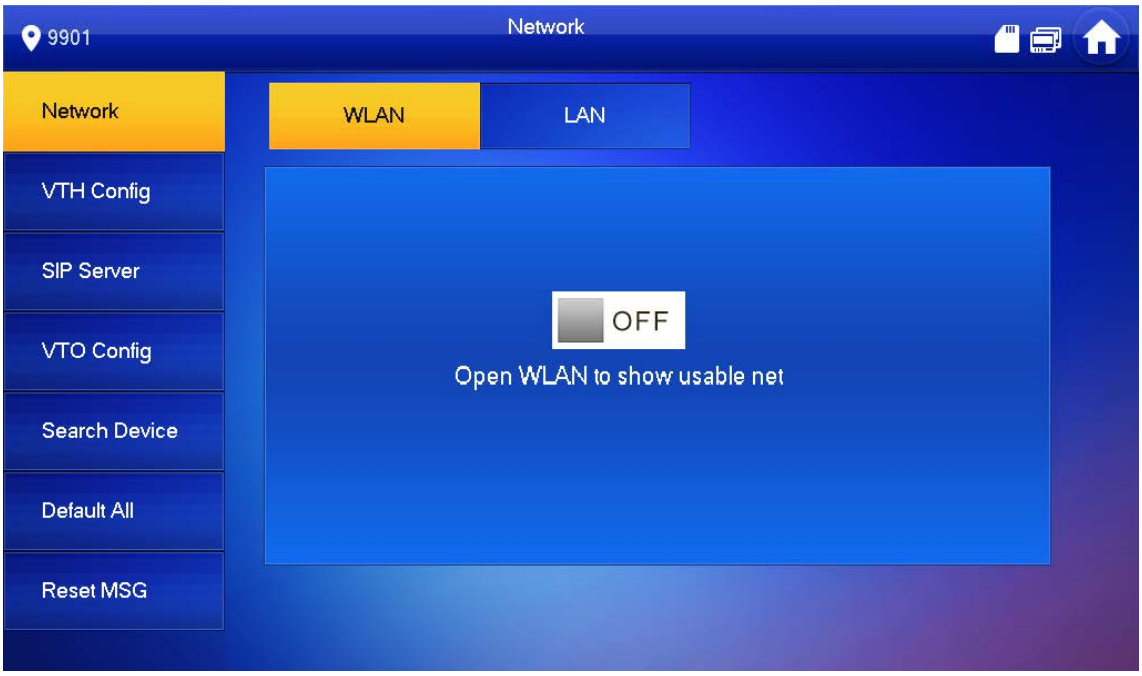

2) Connect to a network.

The system has 2 access ways as follows.

- Tap **Wireless IP** and enter **Local IP**, **Subnet Mask** and **Gateway**, and then tap **OK**.
- Tap **Wireless IP**, turn on **DHCP** to obtain the information automatically.

To obtain IP information with DHCP function, use a router with DHCP function.

Enable the DHCP function

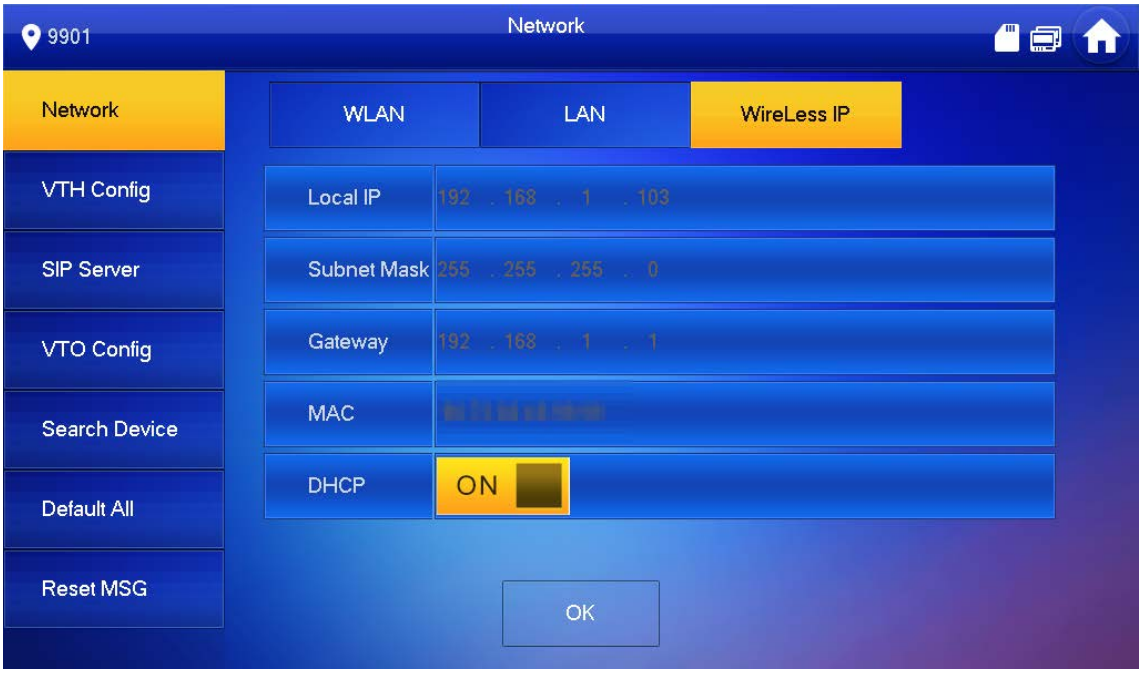

3.1.2.3 VTH Config

On the home screen, tap **Setting** for about 3 seconds.

Enter password and tap **OK**.

Tap **VTH Config**.

VTH configuration

Configure VTH information.

- As a main VTH.

  Enter the room number (such as 9901 or 101#0) and other information, and then tap **OK**.

- Room number must be the same with **VTH Short No.**, which is configured when adding VTHs on the VTO web interface. Otherwise, it will fail to connect to the VTO.
- When there are extension VTHs, room numbers must end with #0. Otherwise, it will fail to connect to the VTO.
- As an extension VTH.

  1) Switch **Main** to **Extension**.
  2) Enter the room number (such as 101#1), Main VTH IP (IP address of the main VTH) and other information, and then tap **OK**.

  Main VTH Username and **Main VTH PWD** are the username and password of main VTH. Default user name is admin, and the password is the one set during initialization.

Turn on the following functions as needed.

- **SSH**: The debugging terminal will connect to the VTH remotely through SSH protocol.
- **Security Mode**: Log in to the VTO in a secured way.
- **Password Protection**: Encrypt the password before sending out.

  It is recommended to turn off SSH, and turn on security mode and password protection. Otherwise, the device might be exposed to security risks and data leakage.

Tap **OK**.

3.1.2.4 SIP Server

Configure SIP server information to connect to other devices.

On the home screen, tap **Setting** for about 3 seconds.

Enter the password and tap **OK**.

Tap **SIP Server**.

SIP server

Configure the parameters.

Table 3-5 SIP server parameters

Parameter	Description
Server IP	When a platform works as the SIP server, it is the IP address of the platform. When a VTO works as the SIP server, it is the IP address of the VTO.
Network Port	5080 when a platform works as the SIP server. 5060 when a VTO works as the SIP server.
Username	Keep it default, or turn on **Custom Name**, and then you can edit the username.
Registration PWD	Keep it default.
Domain Name	When a VTO works as the SIP server, it must be VDP; otherwise, it can be null.
Username	SIP server login username and password.
Login PWD	

Turn on **Enable Status** to enable the SIP server function.

Tap **OK**.

3.1.2.5 VTO Configuration

Add VTOs and fence stations to bind them with the VTH.

On the home screen, tap **Setting** for about 3 seconds.

Enter the password set during initialization, and tap **OK**.

Tap **VTO Config**.

VTO config

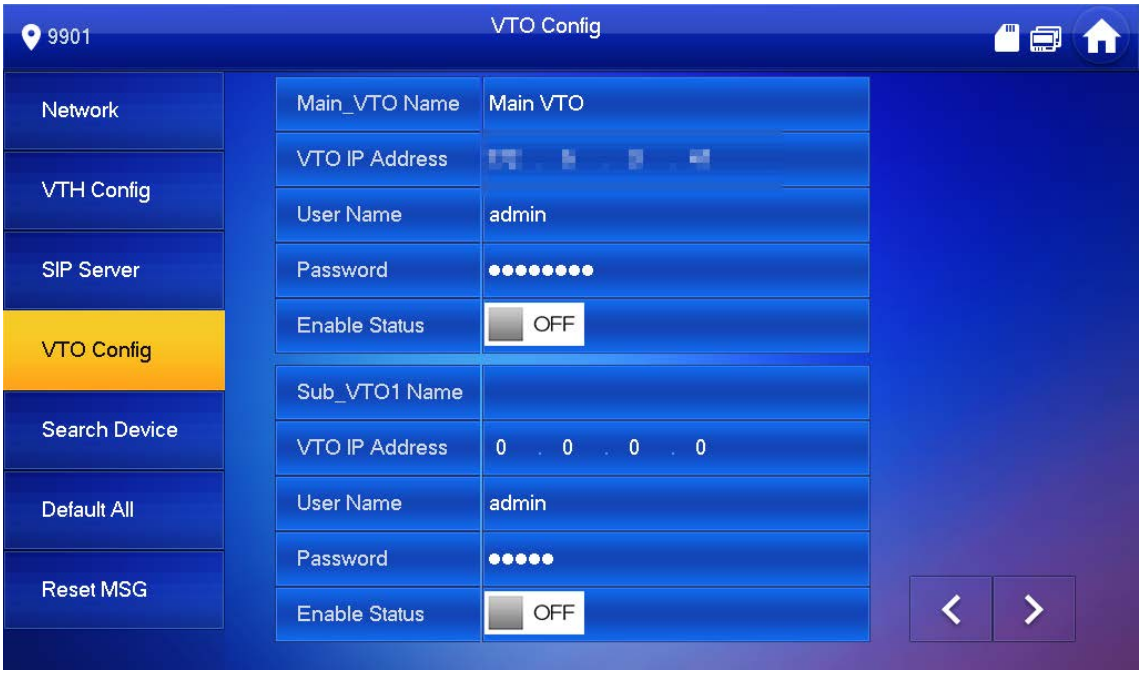

Add VTO or fence station.

- Add main VTO.

1) Enter the main VTO name, VTO IP address, username and password.
2) Turn on **Enable Status**.

User Name and **Password** must be consistent with the web page login username and password of the VTO.

- Add sub VTO or fence station.

1) Enter the sub VTO or fence Station name, IP address, username and password.
2) Turn on **Enable Status**.

Tap / to turn page and add more sub VTO or fence stations.

3.1.2.6 Searching Device

You can search for VTOs in the same network, and then add them or change their information.

Tap **Search Device**.

If you select **Villa** in Figure 3-14, it will be **Add Device** with the similar function.

Search device

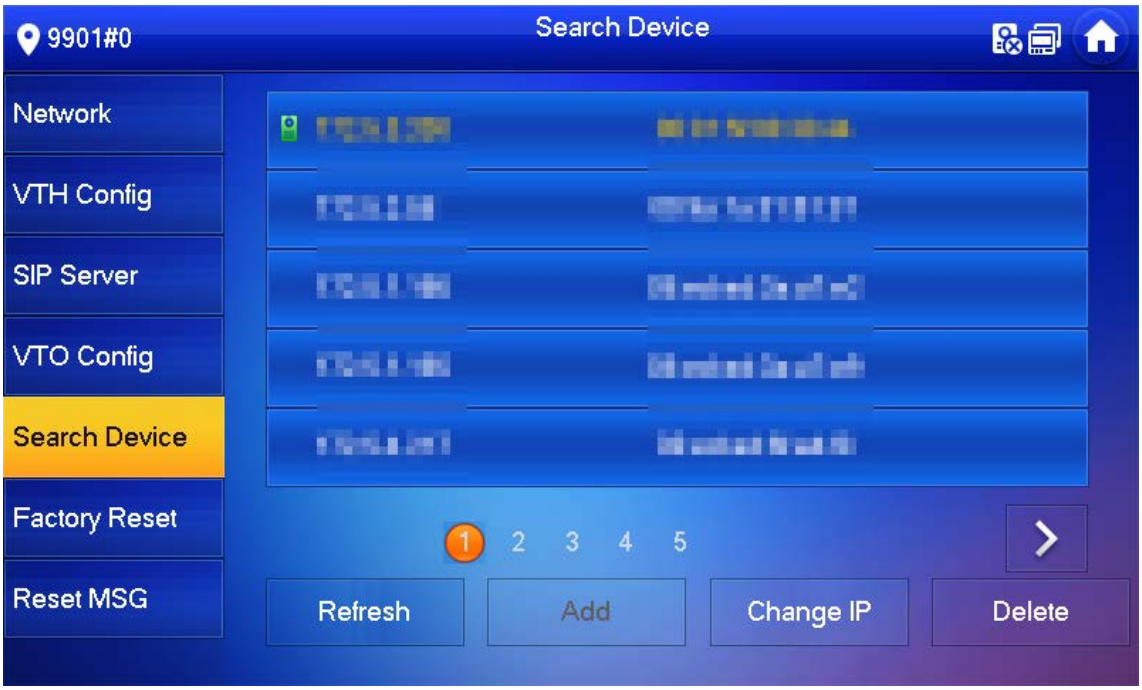

Tap a device.

You can only add or edit villa VTOs.

- Tap **Add**.

Add a VTO

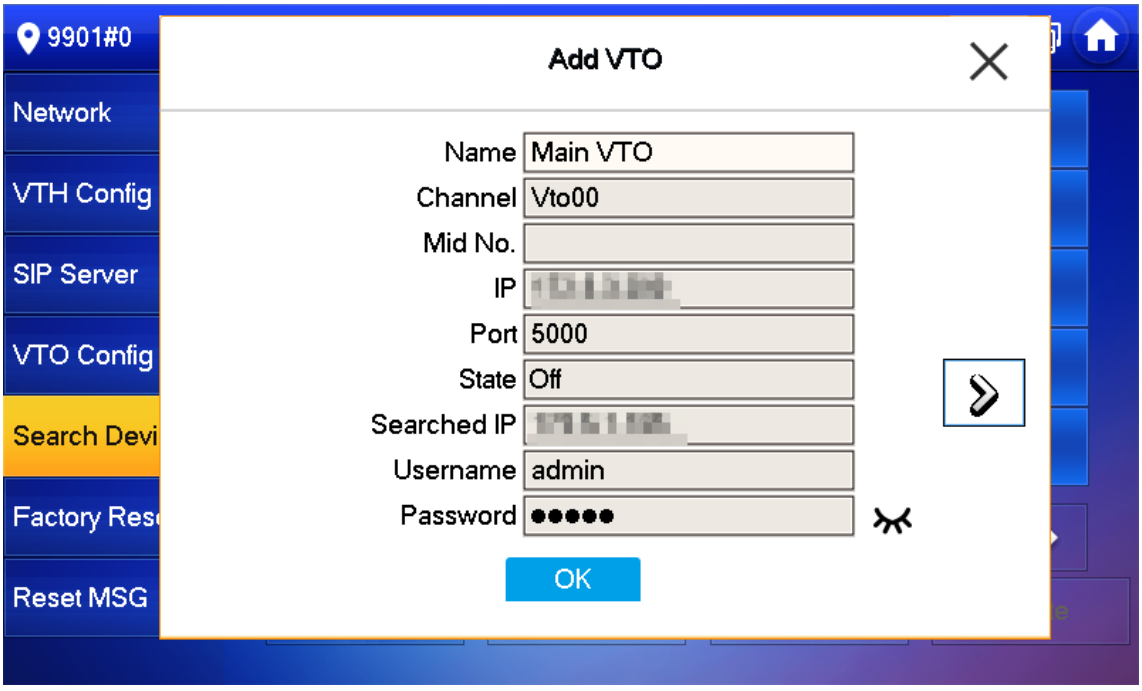

- Tap **Change IP** to change the information of the VTO, including IP, netmask, and gateway.

Username and password cannot be changed here. They are the same as the ones used to log in to the web interface of the VTO, and are used to log in to the VTO.

Change the information of the VTO device

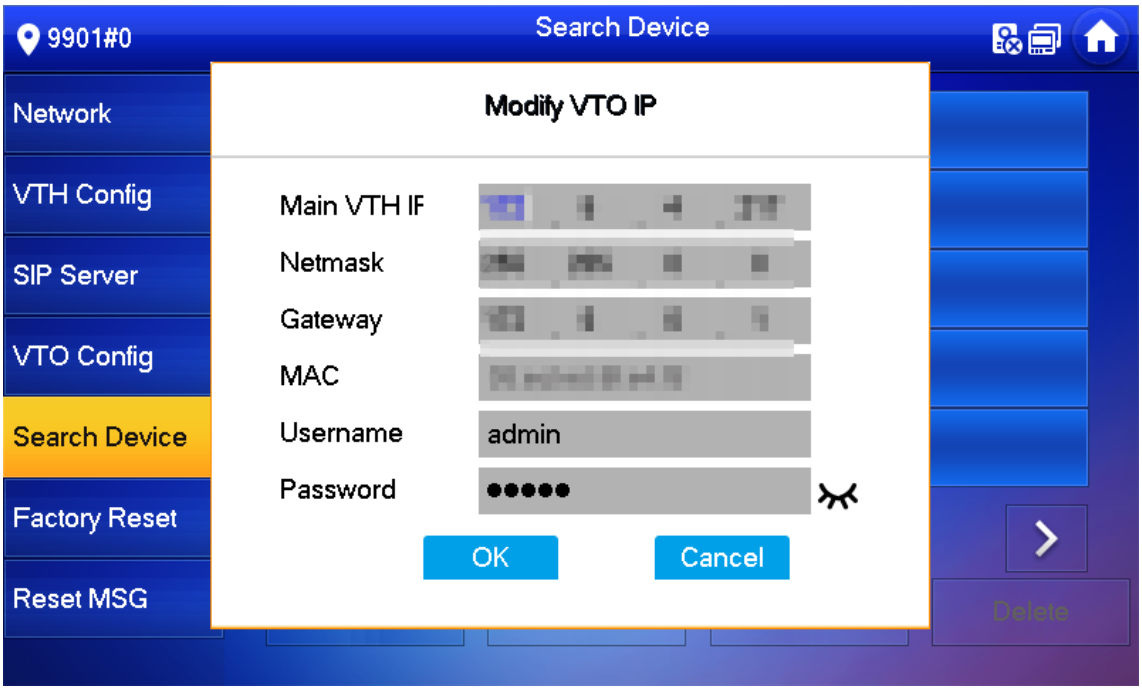

Commissioning

3.2.1 VTO Calling VTH

Dial the VTH room number (such as 101) on the VTO and the following image appears, which means all parameters are correctly configured.

Calling screen

3.2.2 VTH Monitoring VTO

VTH can monitor VTO, fence station or IPC. This section takes monitoring VTO as an example.

On the home screen of the VTH, select **Monitor > Door**, and then tap a VTO to enter monitoring image.

Door

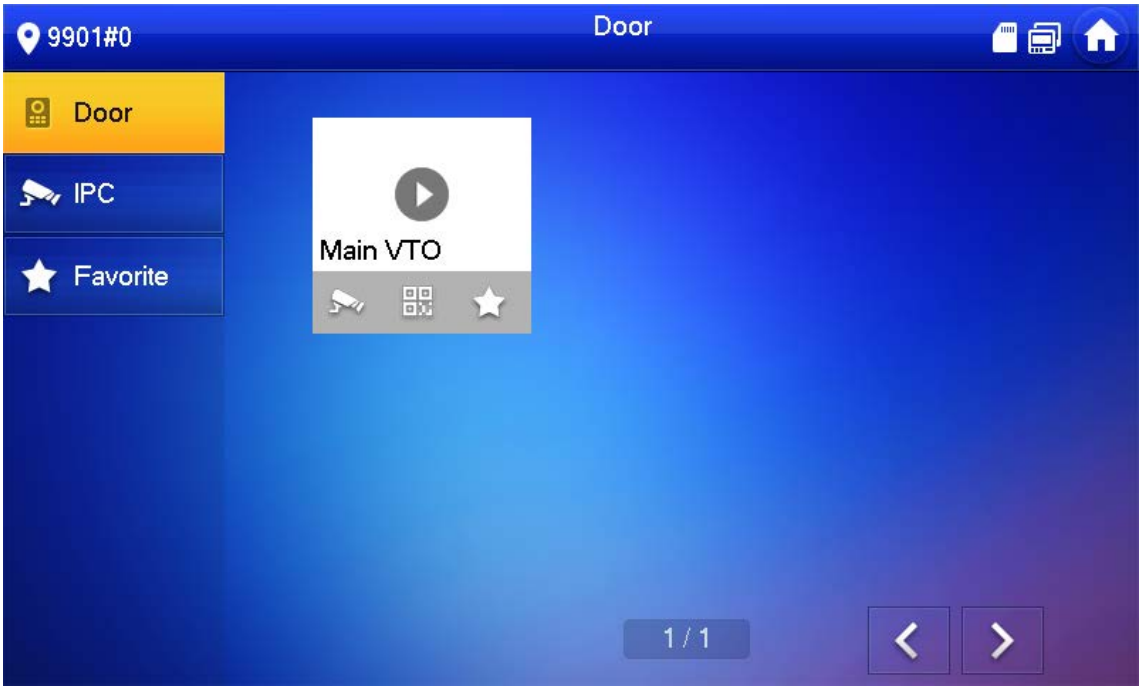

Monitoring image

SD card is needed for recording and snapshot; otherwise, the icons will be gray.

4 Screen Operation

Home Screen

Home screen

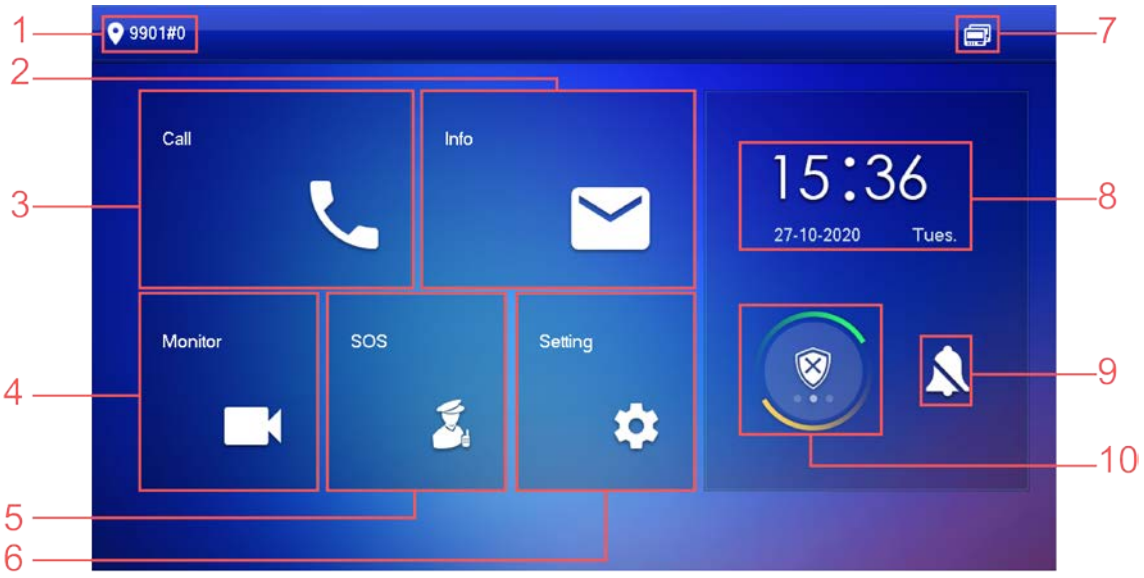

Table 4-1 Home screen description

No.	Name	Description
1	Room number	Number of the room where the VTH is located.
2	Info	● View, delete and clear announcements or security alarm information. ● When the VTH does not have an SD card, and the video-audio message uploading function is enabled on the VTO, three tabs will be displayed, **Guest Msg, Guest Snap** and **Guest Video**. You can view, delete and clear the messages. When the VTH has an SD card, the **Video Pic** tab will be displayed. View, delete and clear the videos and pictures.
3	Call	● Call other VTOs and VTHs. View and manage the contacts and call records.
4	Monitor	Monitor VTOs, fence stations, IPCs and NVRs.
5	SOS	Make emergency call to the Call Management Center.
6	Setting	Tap to enter system setting. Tap for about 3 seconds, input the password set during initialization, and then enter project setting screen.
7	Status	● : Not connected to the network. : Connected to the network through a cable. : Wirelessly connected to the network.

No.	Name	Description
		: Failed to connect to the main VTO; when disappeared, the device has connected to the main VTO. ● : An SD card has been inserted into the device; when disappeared, the device does not have an SD card or support SD card. : DND function has been enabled. It is not enabled by default.
8	Time and date	—
9	Do not disturb	Enable to not receive any call or message.
10	Arm/disarm	Display unread alarm information. ● Tap to select an arm mode.

Call

Manage contact, call and view call records.

4.2.1 Recent Call

Select **Call** > **Recent Call** to view and manage call records.

For missed calls, press the call button on the device front panel to go to the recent call screen.

Recent calls

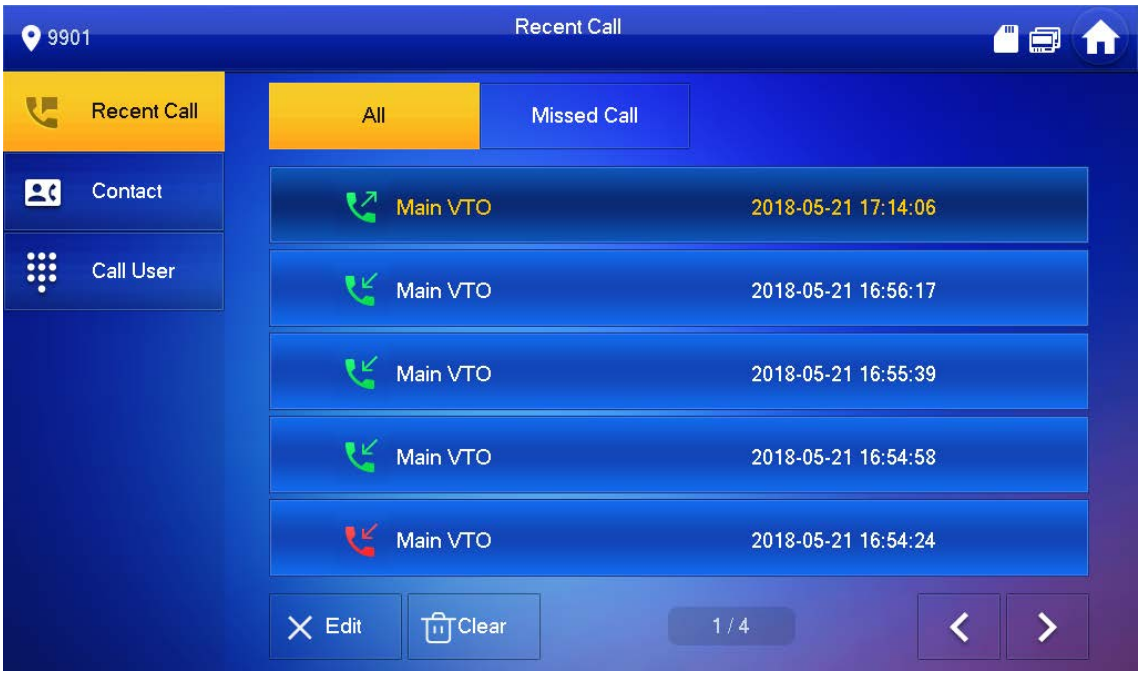

- **Call back**: Tap a call record to call back.
- **Delete**: Tap **Edit**, and then tap **Delete** to delete a record.

- **Clear**: Clear all record in the current tab (**All** or **Missed Call**).

If storage is full, the oldest records will be overwritten. Back up the records as needed.

4.2.2 Contact

Select **Call** > **Contact**, and then add or edit the users.

Contact

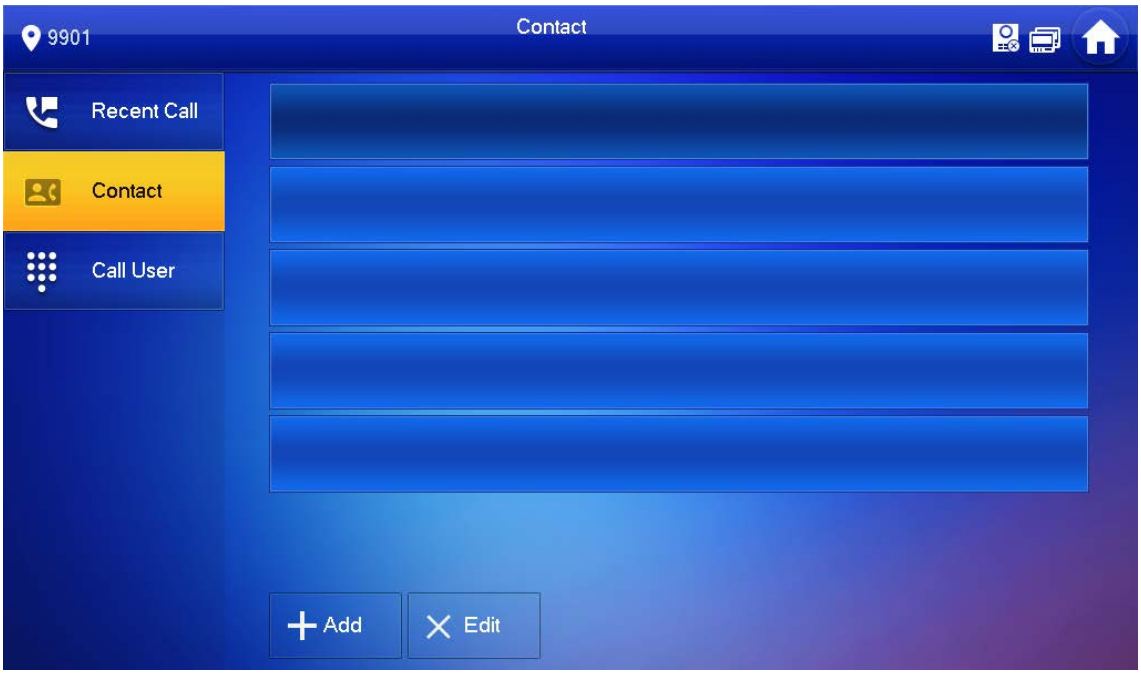

Tap **Add**.

User information

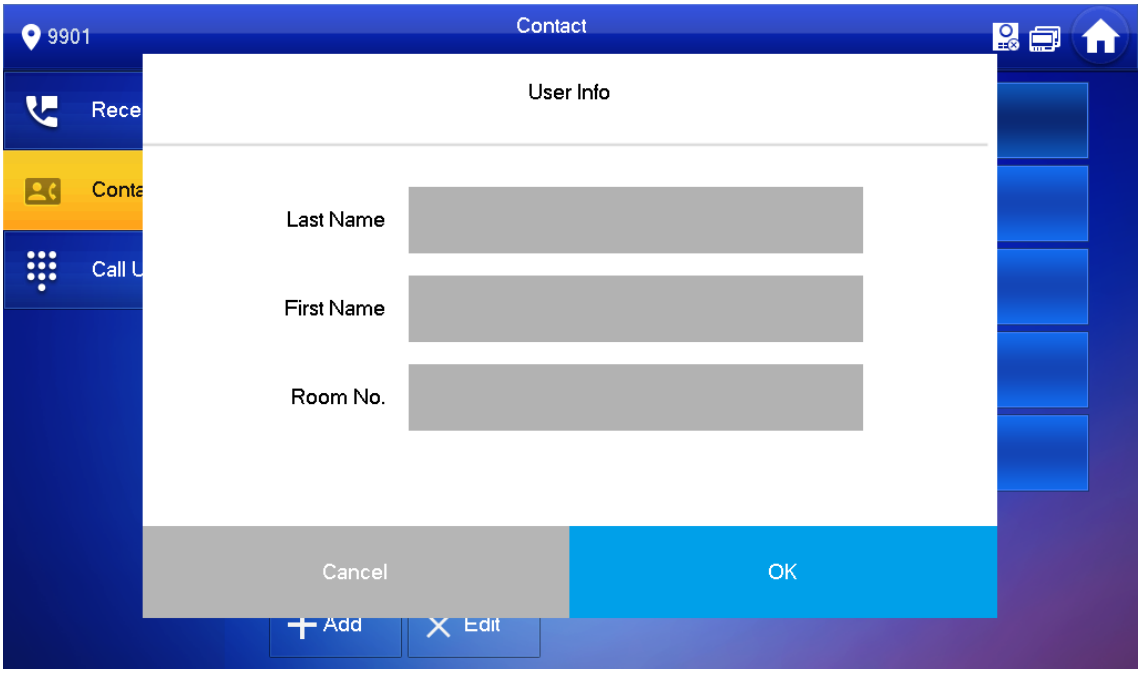

Enter the information.

Tap **OK**.

Related Operations

- Edit user information: Tap a user and tap **Edit**.
- Delete a user: Tap **Edit**, select a user, and then tap **Delete**.

You can select multiple contacts at the same time.

4.2.3 Calling User

- Make sure that resident-to-resident call function has been enabled. See "4.6.6.4 QR Code" for details.
- Call function is used by VTH to call VTH.
- If both VTHs have a camera, bilateral video call can be provided.

4.2.3.1 By Room Number

On the **Call User** screen, dial and call the user.

Select **Call** > **Call User**.

Call user

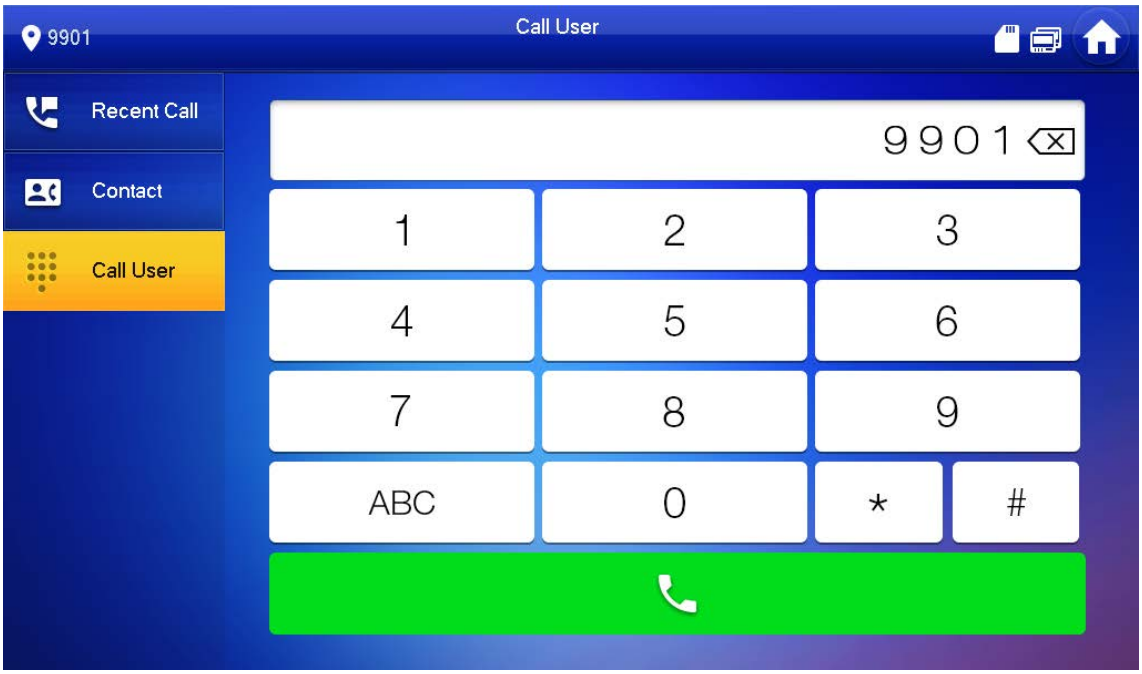

Enter the room number (VTH room number).

- If the VTO works as the SIP server, dial room number directly.
- If the platform works as SIP server:
  - Call a user in the same unit and the same building, dial room number directly.
  - Call a user in other buildings or units, add the building number. For example, dial 1#1#101 to call Building 1 Unit 1 Room 101.

If main VTH (101#0) calls extension (101#1), please enter room no.: #1; if the extension calls the main VTH, please enter room no.: #0.

Tap .

If the VTH has a camera, there will be videos after answering the call.

Calling

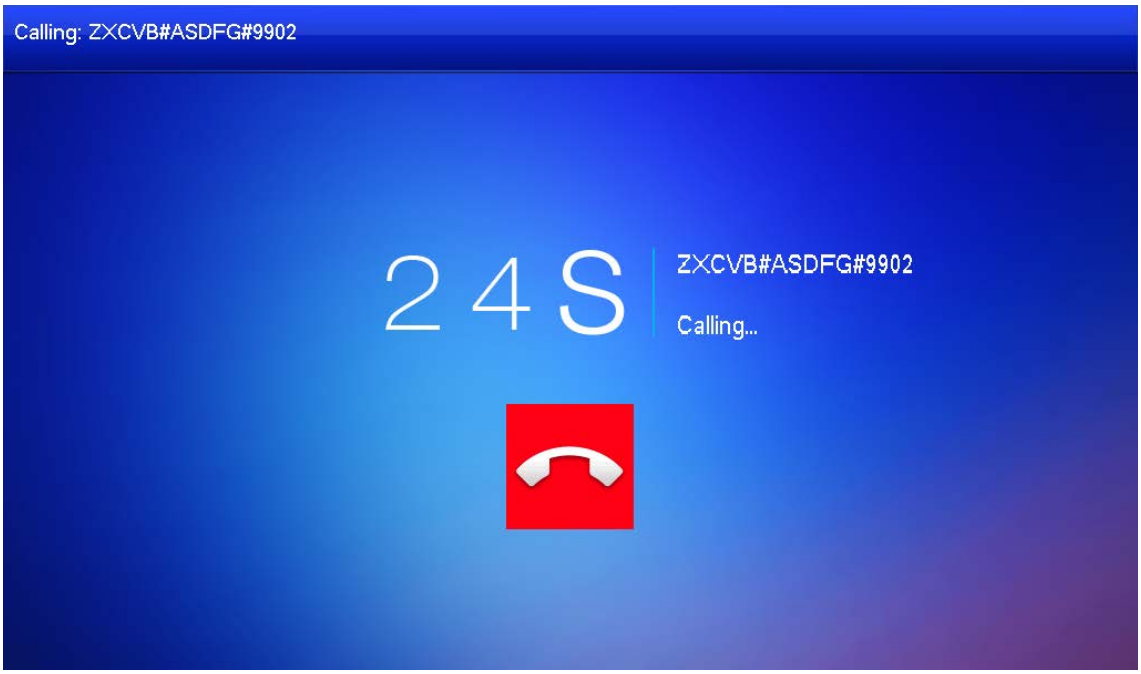

Call in progress

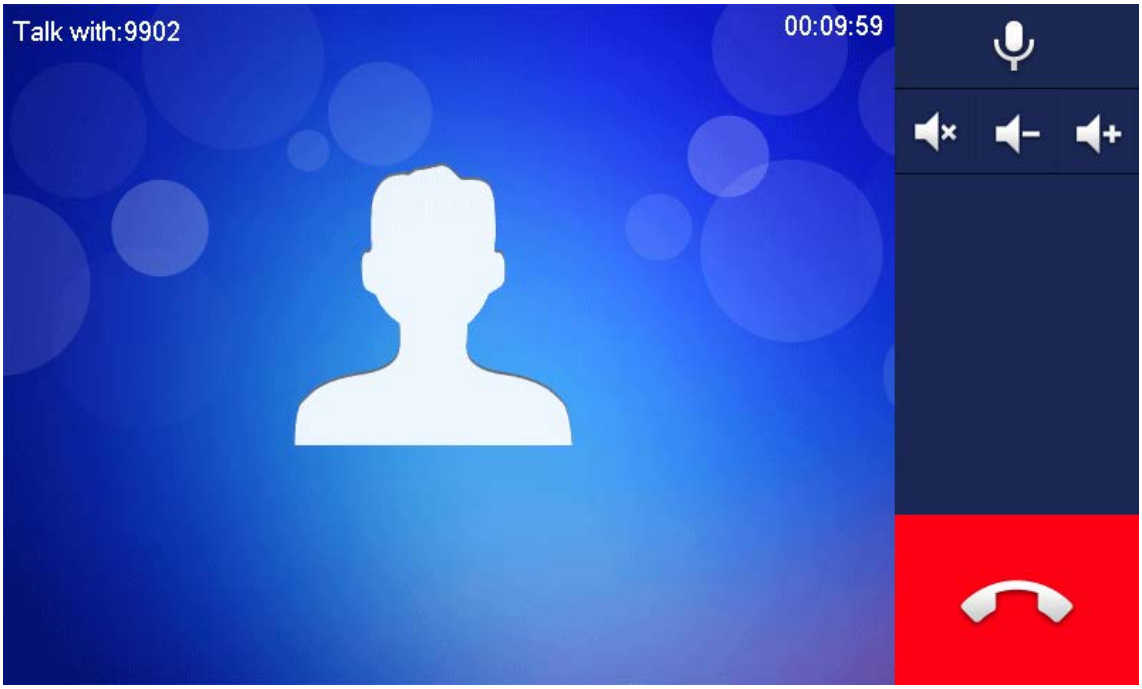

4.2.3.2 From Contact

Add contacts first. See "4.2.2 Contact ".

Select **Call** > **Contact**.

Select the one you want to call.

Tap to start.

4.2.4 Calling from User

When receiving calls from other VTHs, the following screen will be displayed.

Call screen (1)

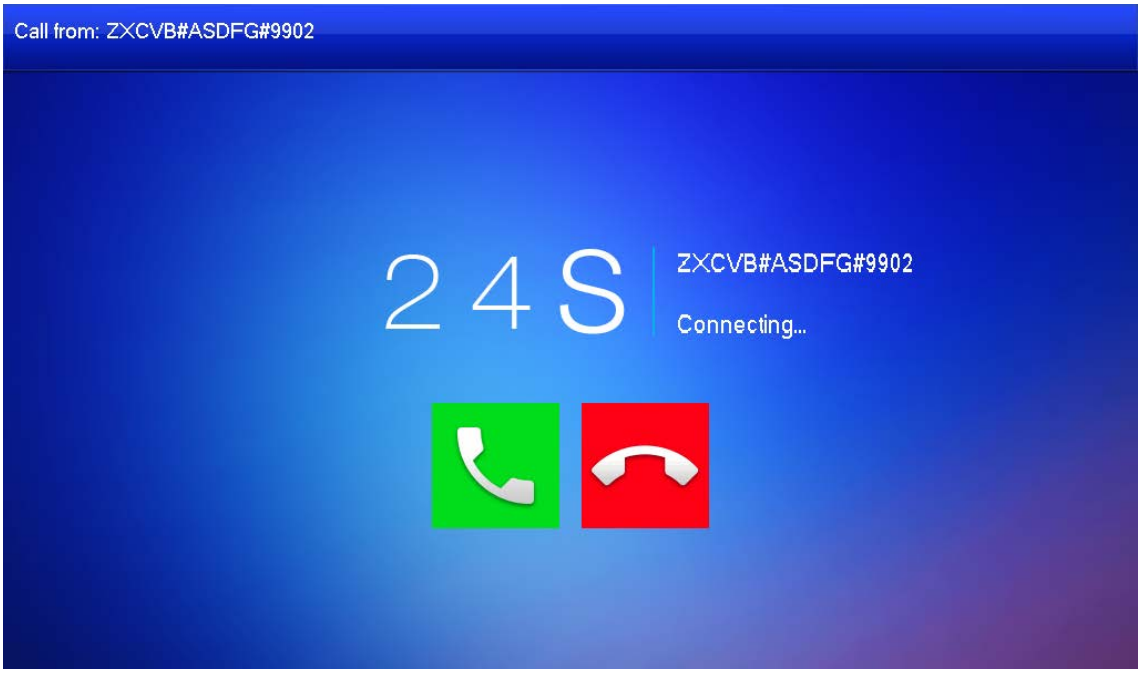

z : Answer.

z : Hang up.

Call screen (2)

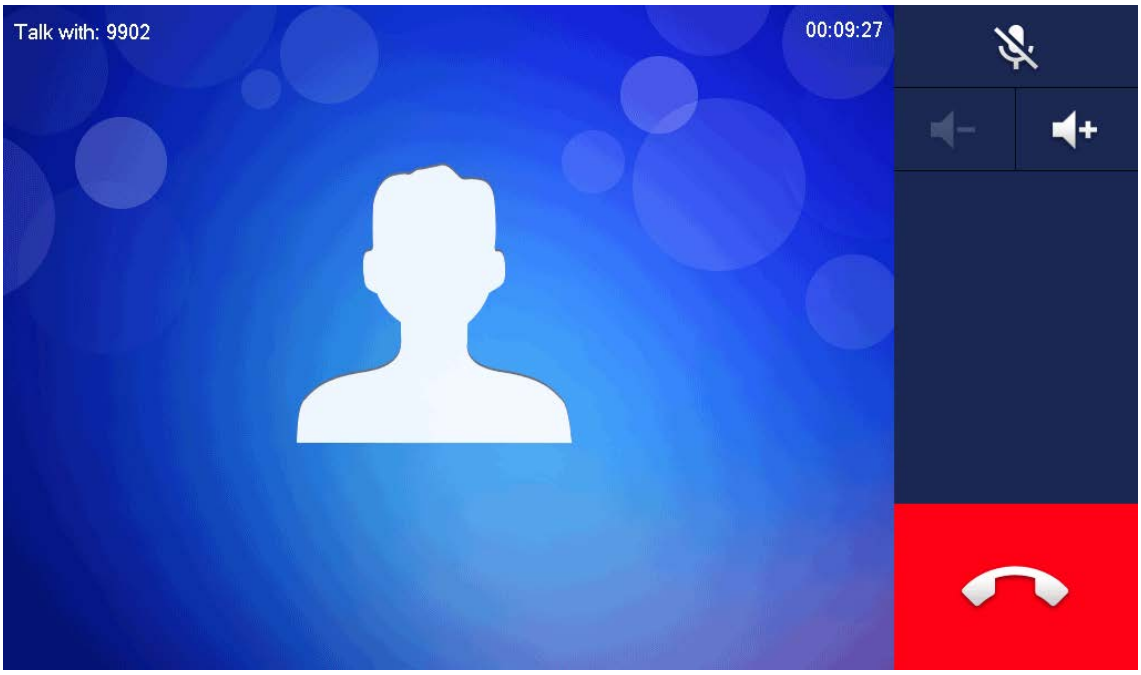

4.2.5 Calling from VTO

Dial VTH room number (such as 9901) on VTO to call VTH.

On the VTH screen, tap **Answer**.

Call from VTO

Table 4-2 On-screen icon description

Key	Description
/	Remotely unlock the door where the VTO is installed. The system provides 2-channel unlock. If the icon is gray, it means that the unlock function of this channel is not available.
	Tap to talk to the VTO.
	Select an IPC in **Favorite** to monitor.
	Take snapshots. This key will be gray if SD card is not inserted.
	Take recording. Complete recording when the call is completed or by tapping . z This key is gray if SD card is not installed. z Videos are stored in SD card of this VTH. If the SD card is full, the earlier videos will be covered.
	Mute.

Key	Description
	Turn down the volume.
	Turn up the volume.
	Answer calls.
	Hang up calls.

Information

You can view and manage different kinds of information.

- Information in **Security Alarm** and **Publish Info** is stored in the VTH, and the one in **Guest Message** and **Video Pictures** is stored in the SD card, which means you need an SD card for these two functions.
- Only certain models support SD card.
- If the storage in the Device or SD card is full, the oldest records will be overwritten. Back up the records as needed.

4.3.1 Security Alarm

When an alarm is triggered, there will be 15s alarm sound, and the screen below will be displayed. The alarm information will be uploaded to the alarm record screen and management platform.

Message

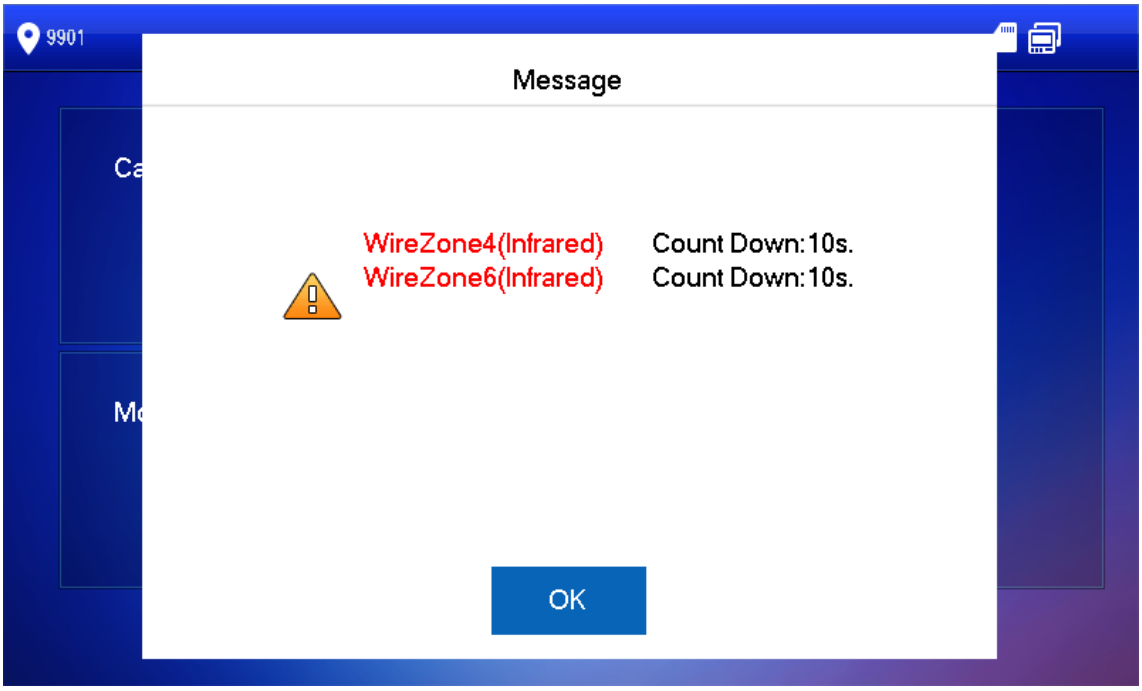

Select **Info > Security Alarm**, and then you can view and manage all alarm records.

Security alarm

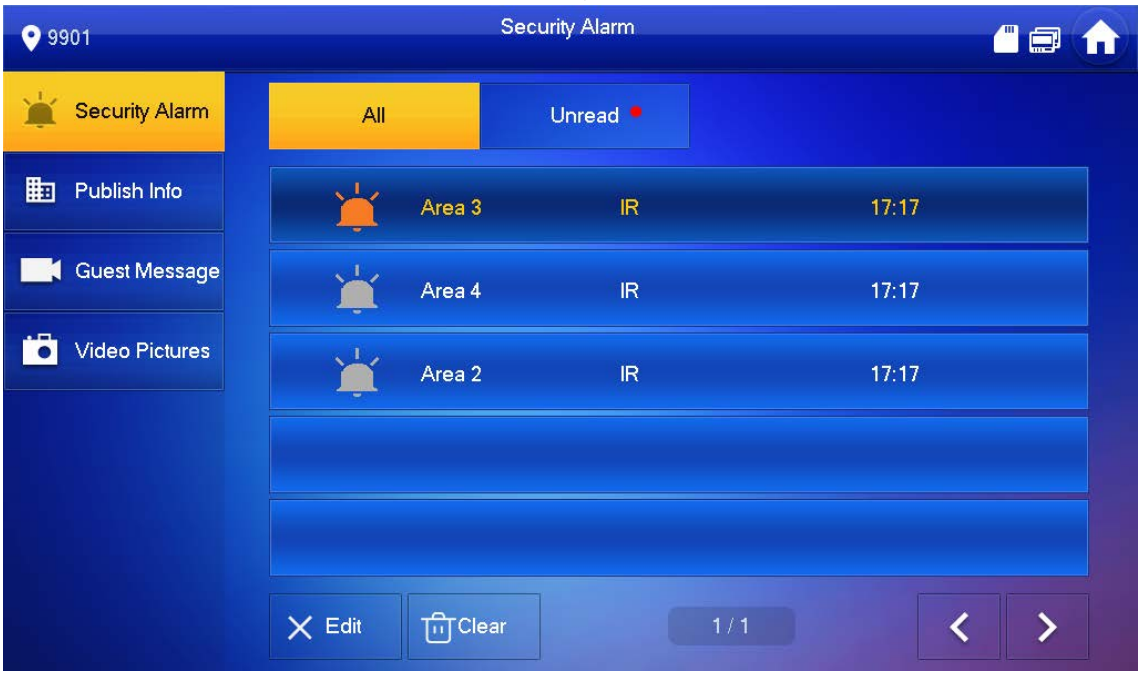

4.3.2 Guest Message

Select **Info > Guest Message**, and then you can view and manage all messages.

Guest message

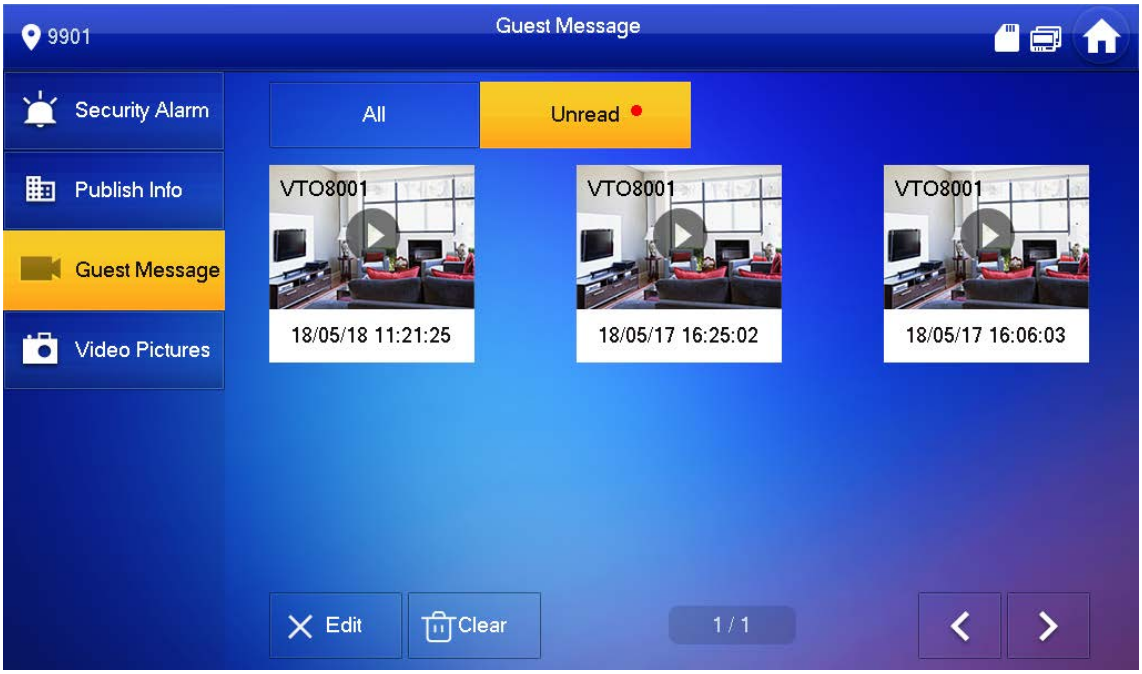

4.3.3 Publish Information

Select **Info > Publish Info**, and then you can view and manage all messages.

Publish info

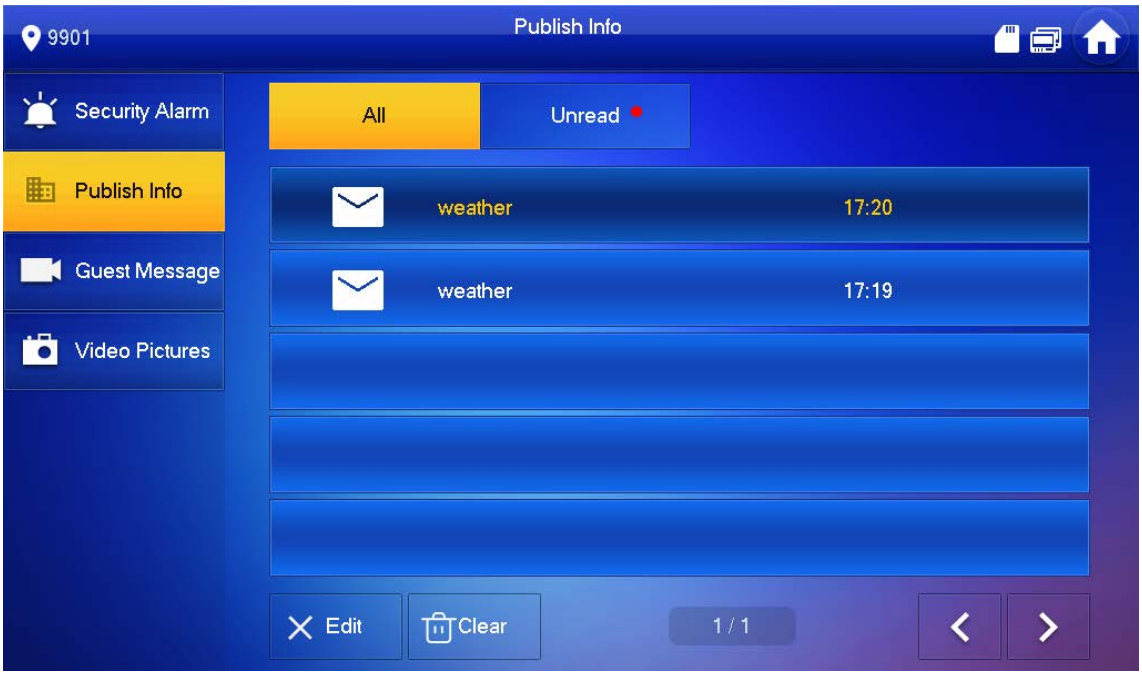

4.3.4 Video Pictures

Select **Info > Video Pictures**, and then you can view and manage pictures and videos.

Records

Monitor

You can monitor VTO, fence station or IPC on the VTH.

4.4.1 Monitoring VTO

When adding VTOs, make sure that the username and password of each device is consistent with their web login username and password. See "3.1.2.5 VTO Configuration " for details. Otherwise, monitoring will not work properly.

When monitoring, press the call button on the device front panel to talk to the VTO.

Select **Monitor > VTO**.

Door

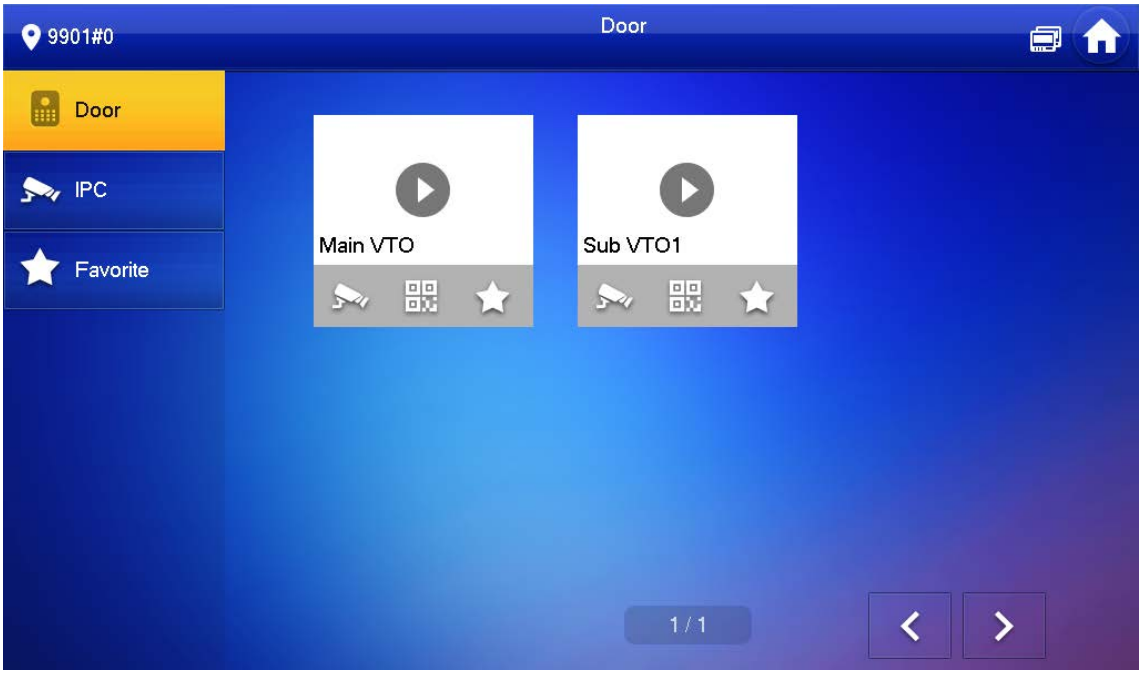

Table 4-3 Function description

Icon	Description
	Add the VTO or fence station to **Favorite**.
	Select an IPC, and when this VTO or fence station calls, you will see the monitoring image from this IPC. Add an IPC first. See "4.4.2.1 Adding IPC " for details.
	Display the serial number of the VTO or fence station in QR code. Scan the QR code in the app to add it to the app, and then you can monitoring the VTO from your smartphone. See "5 DSS Agile VDP" for details.

Tap .

Table 4-4 Function description

Icon	Description
/	Remotely unlock the door where the VTO is located. The system provides 2-channel unlock function. If the icon is gray, it means that unlock function of this channel is not available.
	Take snapshot. An SD card is needed to use this function.
	Tap to start recording, and it will stop when the call is completed or by tapping . If the SD card is full, the oldest videos will be overwritten. An SD card is needed to use this function.
/	If the VTH is connected to multiple VTOs/IPCs, tap and to switch device.
	Exit monitoring.
	Tap to speak to the other end device, and tap again to stop.

4.4.2 Monitoring IPC

4.4.2.1 Adding IPC

- IPCs added to the main VTO and Express/DSS will be synchronized to the VTH. The synchronized IPCs cannot be deleted.
- Before adding an IPC, make sure that it is powered on, and connected to the same network as the VTH.

Select **Monitor** > **IPC**.

You can tap to add the IPC to **Favorites**.

IPC

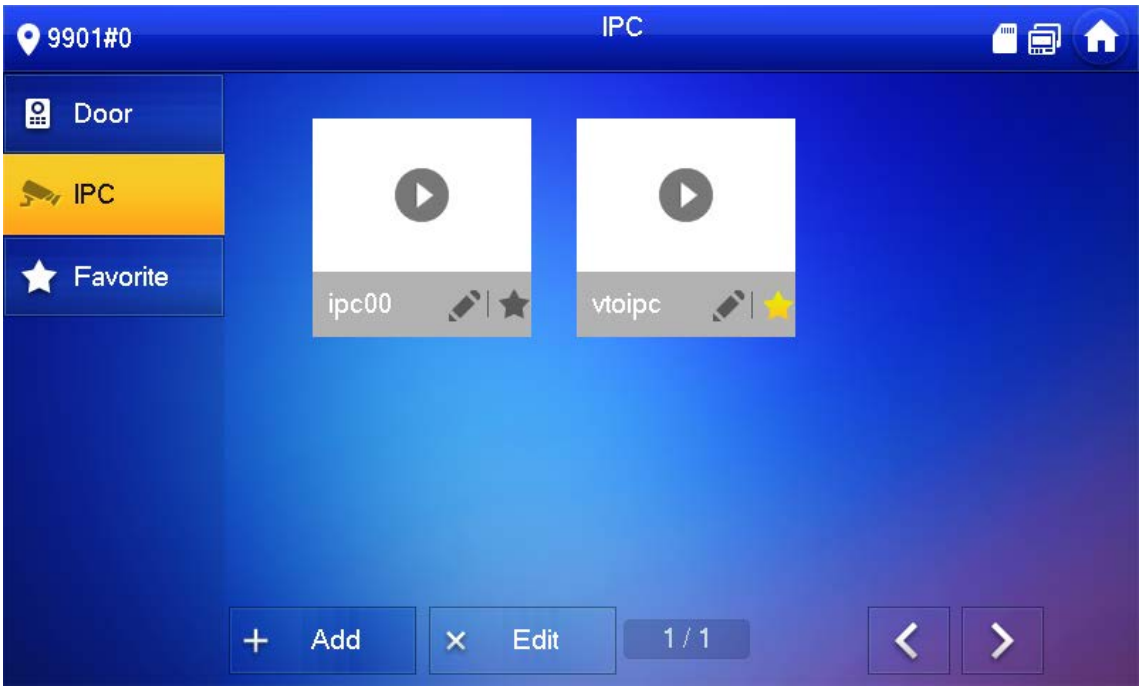

Tap **Add**.

Add IPC

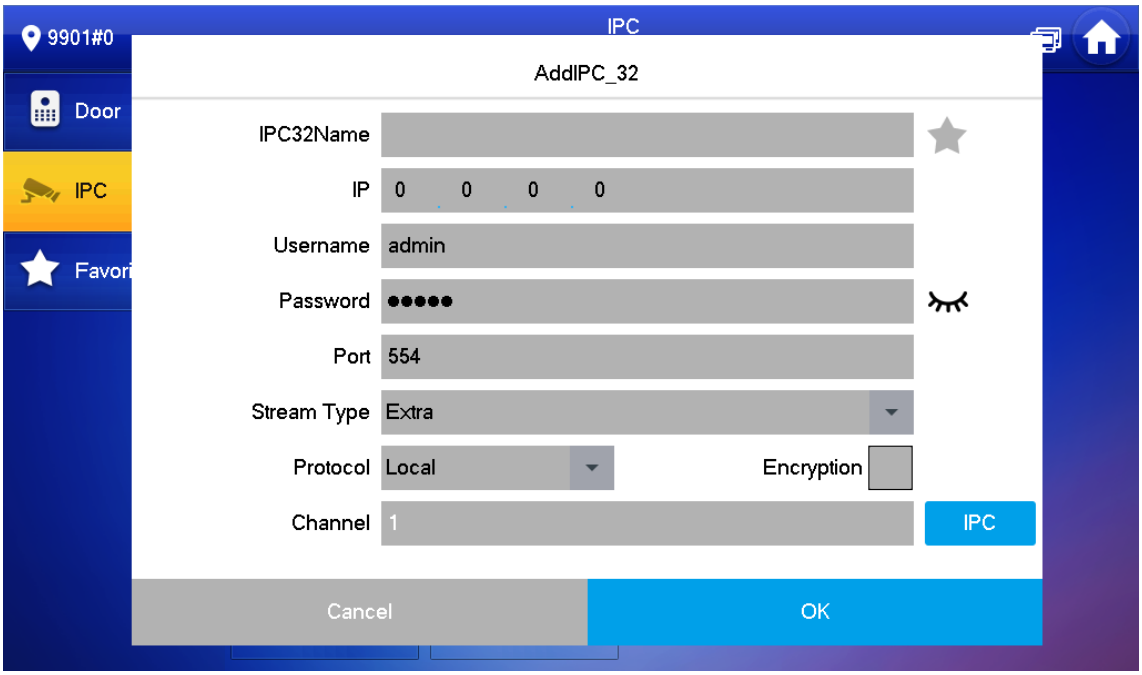

Configure the parameters.

Table 4-5 Parameter description

Parameter	Description
IPC	Select IPC or NVR.
IPC32 Name	Name of the IPC/NVR.
IP	IP address of the IPC/NVR.
User Name	Web page login username and password of the IPC/NVR.
Password	
Port	554 by default.
Stream Type	Main stream: High definition that needs large amount of bandwidth. Applicable to local storage. Extra stream: Relatively smooth image that needs small amount of bandwidth. Applicable to network with insufficient bandwidth.
Protocol	It includes local protocol and Onvif protocol. Please select according to the protocol of the connected device.
Encryption	Enable it if the IPC to be added is encrypted.
Channel	If IPC is connected, default setting is 1. If NVR is connected, set channel number of IPC on NVR.

Tap **OK**.

4.4.2.2 Modifying IPC

Select **Monitor > IPC**.

Tap of IPC.

Modify IPC parameters. See Table 4-5 for details.

Tap **OK**.

4.4.2.3 Deleting IPC

Delete an IPC that has been added. However, IPCs synchronized from the VTO or the platform cannot be deleted.

Select **Monitor** > **IPC**.

Tap **Edit**.

Select **IPC**.

Tap **Delete** to delete the selected IPC.

4.4.2.4 Monitoring IPC

Monitor the IPC.

Select **Monitor** > **IPC**.

Select the IPC to be monitored, and tap .

Monitoring video

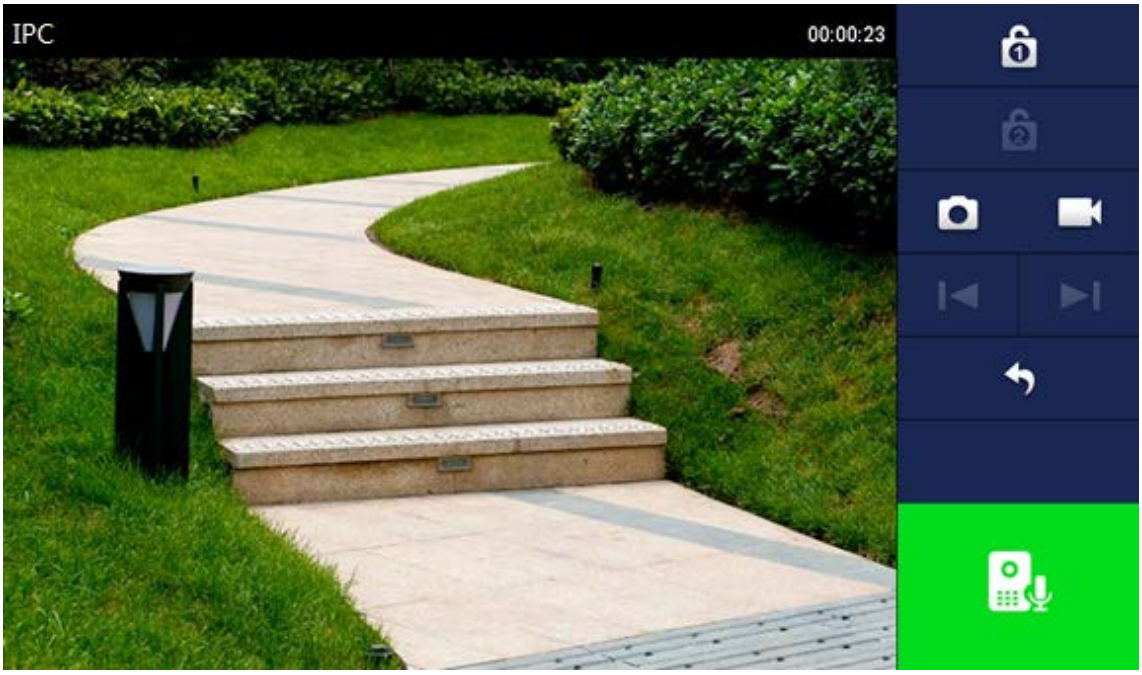

Please monitor the VTO by reference to Table 4-4.

4.4.3 Favorite

Displays VTOs, fence stations or IPCs that have been added to **Favorite**.

To view favorite list, make sure that VTOs, fence stations or IPCs have been added to **Favorite**. Otherwise, the list is empty.

Select **Monitor** > **Favorite**.

Favorite

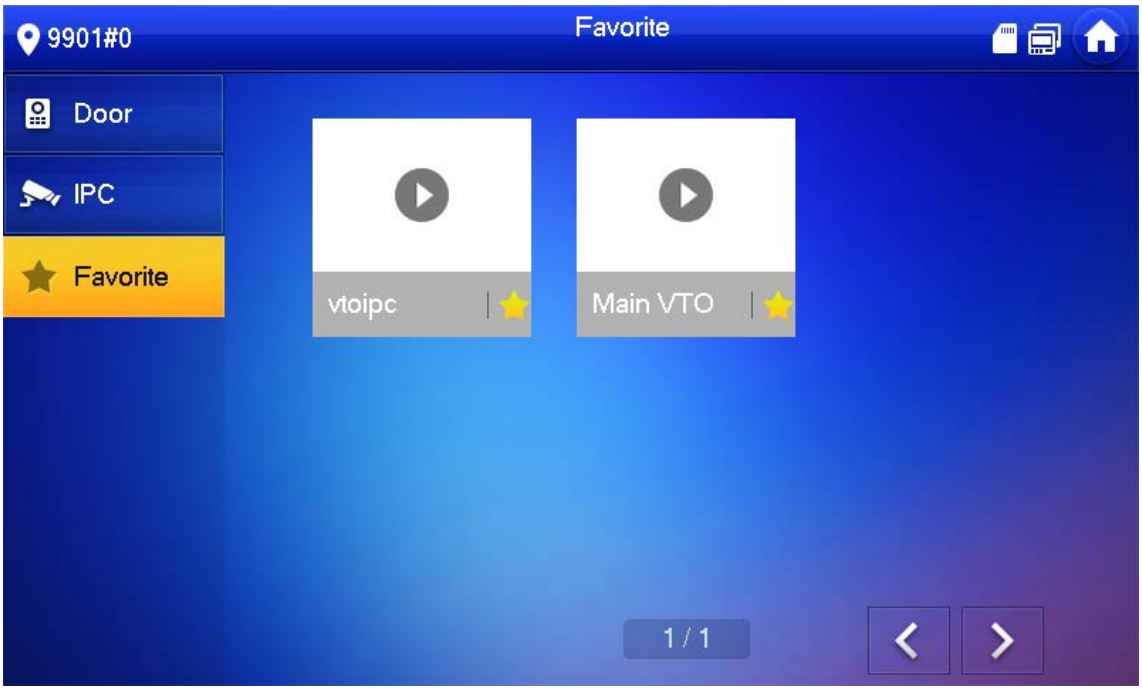

Select the device to be monitored, and tap .

The system displays monitoring screen. In case of multiple devices in **Favorite**, tap / to switch and monitor them.

SOS

Please make sure that the management center has been connected. Otherwise, it will fail to call.

In case of emergency, press the SOS button on the device front panel, or tap **SOS** on the home screen to call the management center.

Setting

4.6.1 Ring Settings

Set VTO ring, VTH ring, alarm ring and other rings.

- There is an SD card on the VTH, and users can import ring tones to the SD card.
- Ring tones must be stored in the /Ring folder at the root directory of the SD card.

- Audio files must be .pcm files (audio files of other formats cannot be played if you change their extension names).
- Audio file size must be less than 100 KB.
- Ring tone format: .pcm.
- You can only customize 10 ring tones. Other ring tones will not be displayed at the VTH.

4.6.1.1 VTO Ring

Set a ring for the connected VTO, and support to set a maximum of 20 VTOs.

Tap **Setting**.

Select **Ring** > **VTO Ring Setup**.

Tap or to page up and down.

VTO ring setup

Tap text box to select rings, and tap and to adjust the volume.

4.6.1.2 VTH Ring

Set the ring for this VTH.

Tap **Setting**.

The system pops up **Password** prompt box.

Input login password and tap **OK**.

The default login password is 123456. Please refer to "4.6.6.3 Password Setting" for details.

Select **Ring** > **VTH Ring Setup**.

VTH ring setup

Tap text box to select rings, and tap and to set the volume.

4.6.1.3 Alarm Ring

Set the ring when the VTH gives an alarm.

Tap **Setting**.

Enter login password and tap **OK**.

The default login password is 123456. Please refer to "4.6.6.3 Password Setting" for details.

Select **Ring > Alarm Ring Setup**.

Alarm ring

Tap text box to select rings, and tap and to set the volume.

4.6.1.4 Other Ring Settings

Set VTO ring time, VTH ring time, MIC volume, talk volume and ring mute setting.

VTO Ring Time and **VTH Ring Time** of extension VTH are synchronized with main VTH, and cannot be set.

Tap **Setting**.

Enter login password and tap **OK**.

The default login password is 123456. Please refer to "4.6.6.3 Password Setting" for details.

Select **Ring** > **Other**.

Other settings

Tap and to set the time or volume. Tap to enable **Ring Mute**, and the icon becomes .

- VTO ring time: ring time when a VTO calls this VTH.
- VTH ring time: ring time when another VTH calls this VTH.

4.6.2 Card Information

Issue and manage card information.

This function is only available under **Villa**.

Card management

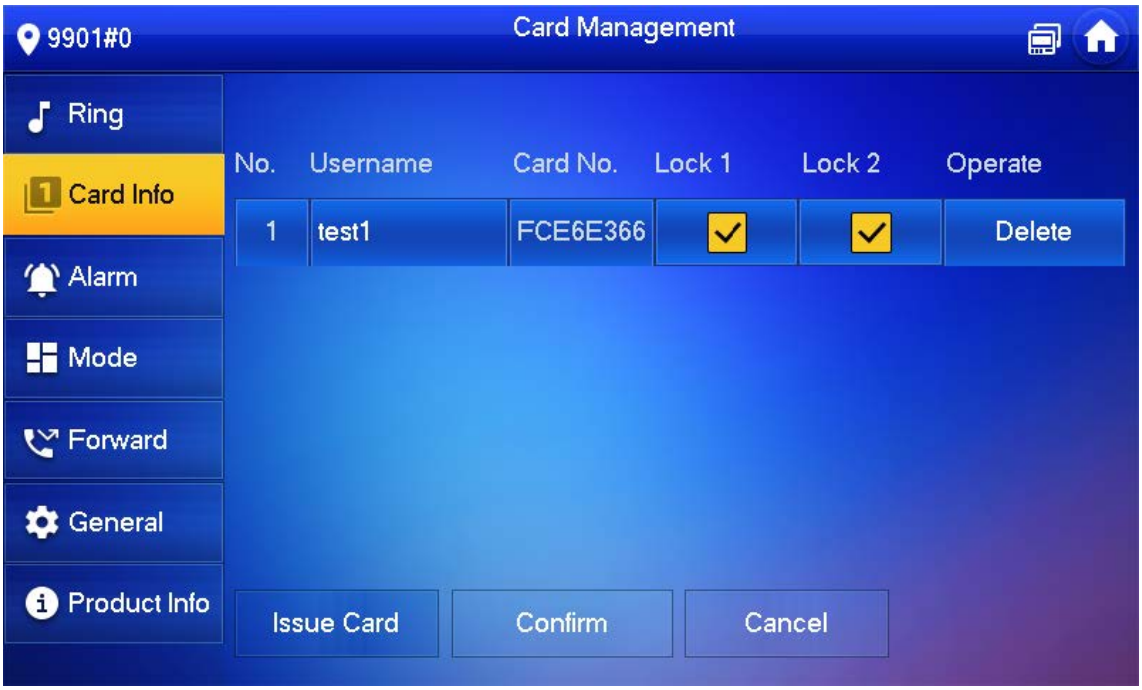

Click **Issue Card**.

Swipe the card on the corresponding VTO.

The card information will be added to the VTH. Assign unlock permission by selecting **Lock 1** and **Lock 2** as needed.

Click **Confirm**.

Click **Delete** to delete the card information.

4.6.3 Alarm Setting

Set wire zone, wireless zone and alarm output.

Zones can be set under disarm mode.

4.6.3.1 Wire Zone

Set zone type, NO/NC, alarm status and delay. It supports to set 8 zones at most.

Tap **Setting**.

Enter login password and tap OK.

The default login password is 123456. Please refer to "4.6.6.3 Password Setting" for details.

Select **Alarm** > **Wire Zone**.

Wire zone

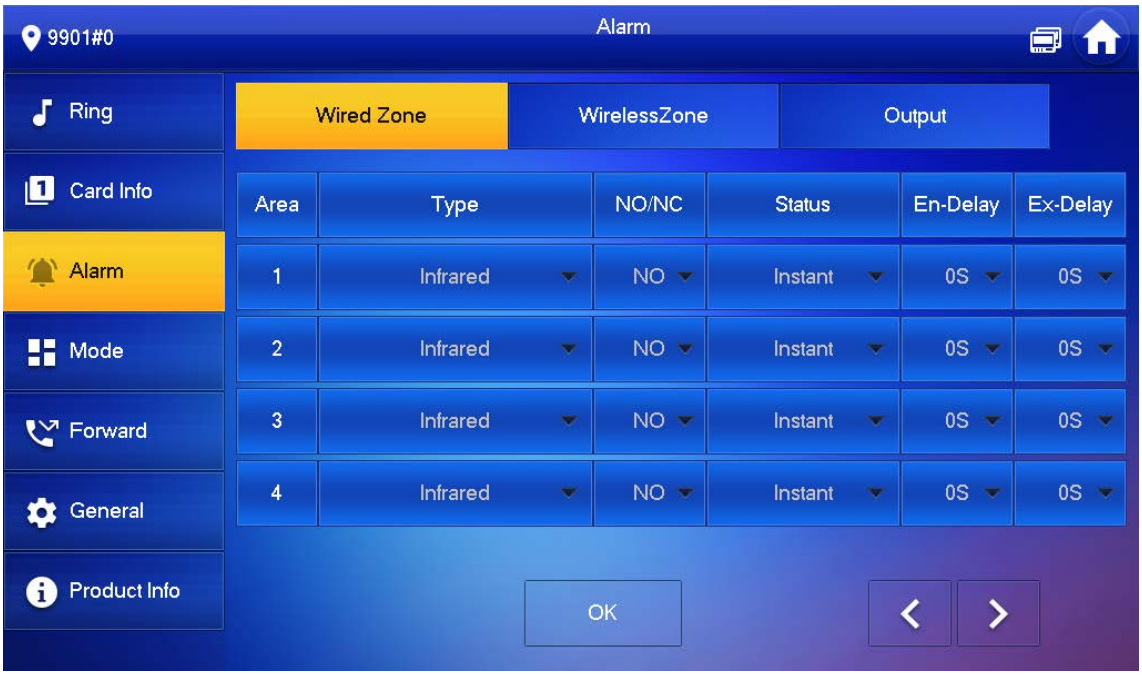

Tap corresponding positions to set area type, NO/NC, alarm status, enter delay and exit delay.

Table 4-6 Parameter description

Parameter	Description	
Area	The number cannot be modified.	
NO/NC	Select NO (normally open) or NC (normally closed) according to detector type. It shall be the same as detector type.	
Type	Select corresponding type according to detector type, including IR, gas, smoke, urgency btn, door, burglar alarm, perimeter and doorbell.	
Status	**Instant Alarm**: After armed, if an alarm is triggered, the device produces siren at once and enters alarm status. **Delay Alarm**: After armed, if an alarm is triggered, the device enters alarm status after a specified time, during which you can disarm and cancel the alarm. ● **Bypass**: Alarm will not be triggered in the area. After disarmed, this area will restore to normal working status. **Remove**: The area is invalid during arm/disarm. **24 Hour**: Alarm will be triggered all the time in the area regardless of arm or disarm. A zone in **Remove** status cannot be bypassed.	
Enter Delay	After entering delay, when armed area triggers an alarm, entering armed area from non-armed area within the delay time period will not lead to linkage alarm. Linkage alarm will be produced if delay time comes to an end and it is not disarmed.	Delay is only valid to the areas of **Delay Alarm**.
Exit Delay	After arm, **Delay Alarm** area will enter arm status at the end of **Exit Delay**. If multiple areas set the exit delay, screen prompt will conform to maximum delay time.	

Tap OK to complete setting.

4.6.3.2 Wireless Zone

Only devices with wireless function have this function.

Add, delete and set wireless zones.

Tap **Setting**.

Enter login password and tap **OK**.

The default login password is 123456. Please refer to "4.6.6.3 Password Setting" for details.

Select **Alarm > Wireless Zone**.

Wireless zone

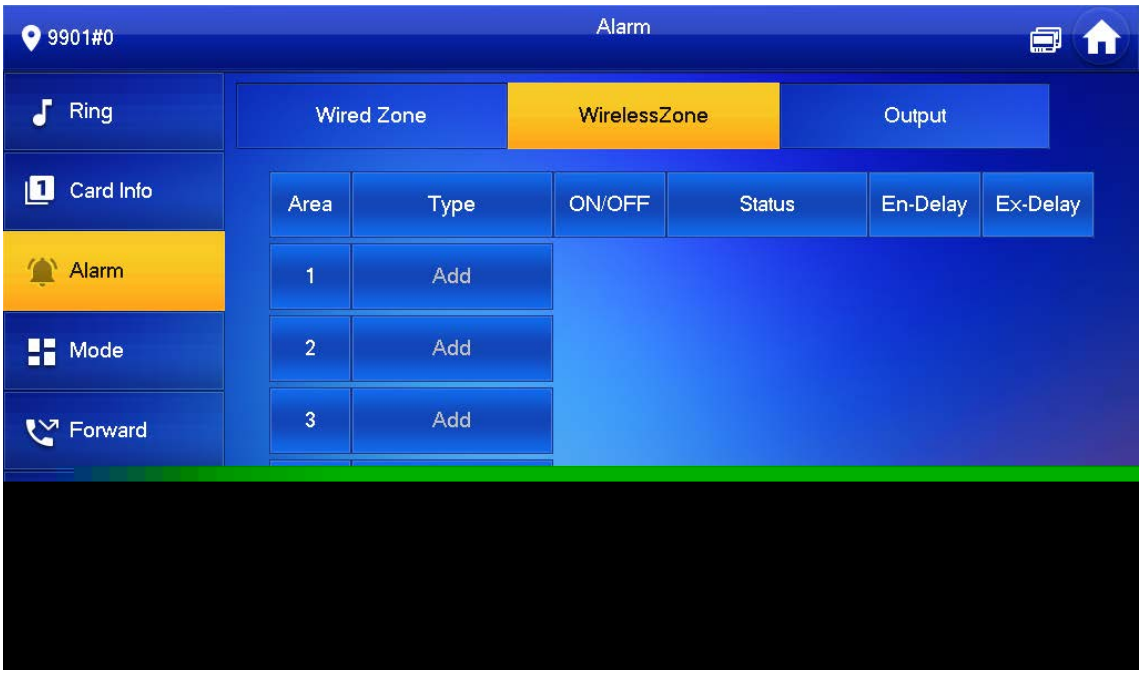

Tap **Add**.

Tap wireless code button of wireless device. See wireless device user's manual for details.

After successful coding, the area info is displayed.

Tap corresponding positions to set alarm status, enter delay and exit delay.

See Table 4-6 for details.

Tap **Edit** to select a zone and **Delete** to delete the selected area.

4.6.3.3 Alarm Output

After enabling alarm output, when other devices call this VTH, the alarm output device will output alarm info.

Tap **Setting**.

Enter login password and tap **OK**.